

# HuneTec

Human Network Technology

## ReFLEX™ 2 Way Personal Communicator **H200 User's Manual**




Aug. 09. 2004



<b>1. SAFETY INFORMATION</b>	<b>4</b>
<hr/>	
<b>2. BEFORE YOU START</b>	<b>5</b>
<hr/>	
2.1 WHAT'S IN THE BOX	5
2.2 HOW TO CHARGE BATTERY	6
2.3 USING THE HOLSTER	7
<b>3. ABOUT YOUR DEVICE</b>	<b>8</b>
<hr/>	
3.1 DESCRIPTION OF YOUR DEVICE	8
3.2 STATUS ICONS IN THE MAIN MENU SCREEN	9
3.3 ICONS FOR MESSAGE LIST	10
3.4 KEY DESCRIPTION	10
3.5 DISPLAY IN THE INITIAL SCREEN	12
3.6 DISPLAY IN THE MAIN MENU SCREEN	12
3.7 LED INDICATOR	13
<b>4. GETTING STARTED</b>	<b>14</b>
<hr/>	
4.1 HOW TO SWITCH DEVICE ON AND OFF	14
4.2 HOW TO RESET DEVICE	14
4.3 HOW TO TURN ON BACKLIGHT	14
4.4 HOW TO LOCK KEYBOARD	14
<b>5. READ MESSAGES</b>	<b>15</b>
<hr/>	
5.1 INBOX	16
5.2 INFO	19
5.3 DRAFT	20
5.3.1 EDITING THE DRAFT MESSAGE	20
5.3.2 SENDING THE DRAFT MESSAGE	20
5.3.3 DELETING THE DRAFT MESSAGE	20
5.4 PERSONAL / BUSINESS / MISC	21
5.5 OUTBOX	21
5.6 SENT	22
5.7 DELETE	22
<b>6. WRITE MESSAGES</b>	<b>24</b>
<hr/>	
6.1 HOW TO SELECT THE ADDRESS	24
6.2 HOW TO COMPOSE MESSAGE	25
<b>7. CONTACTS</b>	<b>27</b>
<hr/>	
7.1 CONTACT LIST	27
7.2 NEW CONTACT	28
7.3 CONTACT VIEW	29
7.4 EDIT CONTACT	30
7.5 CONTACT GROUP	30
7.6 NAME TYPE	31
<b>8. SCHEDULER</b>	<b>32</b>
<hr/>	
8.1 CALENDAR	32
8.2 NEW SCHEDULE	33
8.3 VIEW DAY	34
8.4 EDIT SCHEDULE	35


 
<b>9. TASK</b>	<b>36</b>
9.1 NEW TASK	37
9.2 EDIT TASK	37
<b>10. MEMO</b>	<b>39</b>
10.1 NEW MEMO	40
10.2 EDIT MEMO	40
10.3 SEND MEMO	41
<b>11. PREFERENCE (SETTING UP YOUR DEVICE)</b>	<b>42</b>
11.1 ALERT SETTINGS	42
11.1.1 VOLUME	43
11.1.2 INBOX, INFO, SCH & ALM	43
11.1.3 REMINDER	43
11.1.4 R INTERVAL (REMINDER INTERVAL)	43
11.1.5 R REPEAT (REMINDER REPEAT)	43
11.2 QUICK TEXT	43
11.3 PRIVATE TIME	44
11.4 SETUP	45
11.4.1 SET DATE & TIME	45
11.4.2 DISPLAY SETTINGS	46
11.4.3 OWNER INFORMATION	46
11.4.4 SIGNATURE	47
11.4.5 TITLE SCREEN	47
11.4.6 KEY LOCK PASSWORD	47
11.5 ABOUT	48
11.6 MYMAIL SETUP	49
<b>12. ALARM</b>	<b>50</b>
12.1 ALARM CLOCK	50
12.2 TIMER ALERT	51
<b>13. ETIQUETTE</b>	<b>52</b>
<b>14. LOCK</b>	<b>53</b>
<b>15. WORLD CLOCK</b>	<b>54</b>
15.1 WORLD CLOCK VIEW	54
15.2 SET TIME ZONE	54
<b>16. ENTERTAINMENT</b>	<b>55</b>
<b>17. TX SET</b>	<b>57</b>
<b>18. CALCULATOR</b>	<b>58</b>
<b>19. MYMAIL</b>	<b>59</b>
<b>20. DEVICE AND BATTERY CARE</b>	<b>60</b>
<b>21. TROUBLE SHOOTING</b>	<b>61</b>
<b>22. FCC COMPLIANCE STATEMENT</b>	<b>63</b>
<b>23. UL COMPLIANCE STATEMENT</b>	<b>64</b>

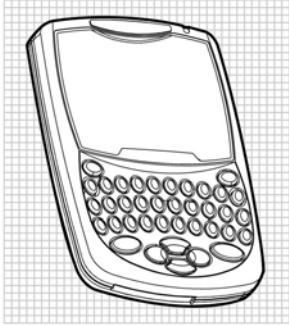

Your new H200 ReFlex Two Way Messenger provides you with the proven reliability that has made us one of the leading Wireless Messenger providers. You can get clear and uninterrupted messenger communication with H200.

For the efficient and safe operation of your device, read this information before using H200 ReFlex Two Way Messenger.

### Pager Transmitter Safety

The FAA has regulations concerning the use of electric devices aboard aircraft.

When boarding on an aircraft, turn your device off to avoid potential interference with aircraft radio communication or navigation equipment.

In blasting zones or wherever it is forbidden to use it, set the TX mode to OFF. This prevents potential transmission interference with sensitive equipment or explosives devices.

### Using your device in a vehicle

Safety comes first, and is the ultimate responsibility of the driver. Please:

 
- i) Give full attention to driving-driving safely is your first responsibility.
- ii) If you receive message or want to write message during you drive vehicle, pull off the road and park your vehicle before reading or writing a message in driving conditions so require.

### For Vehicle Equipped with an Air Bag

An air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment, in the area over the air bag or in the air bag development area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

### Explosive Atmospheres and materials


Turn your device off when in any area with potentially explosive atmospheres and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gasoline stations ; below deck on boats, fuel or chemical transfer or storage vehicles using contains liquefied petroleum gas (such as propane or butane) ; areas where the air contains chemicals or particles, such as ; grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle's engine.

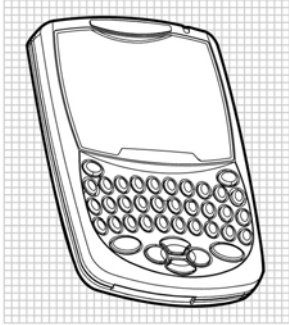

Your new H200 ReFlex Two Way Messenger provides you with the proven reliability that has made us one of the leading Wireless Messenger providers. You can get clear and uninterrupted messenger communication with H200.

## 2.1 What's in the Box?

 When you unpack the box, it contains H200 with the following accessories as shown below.

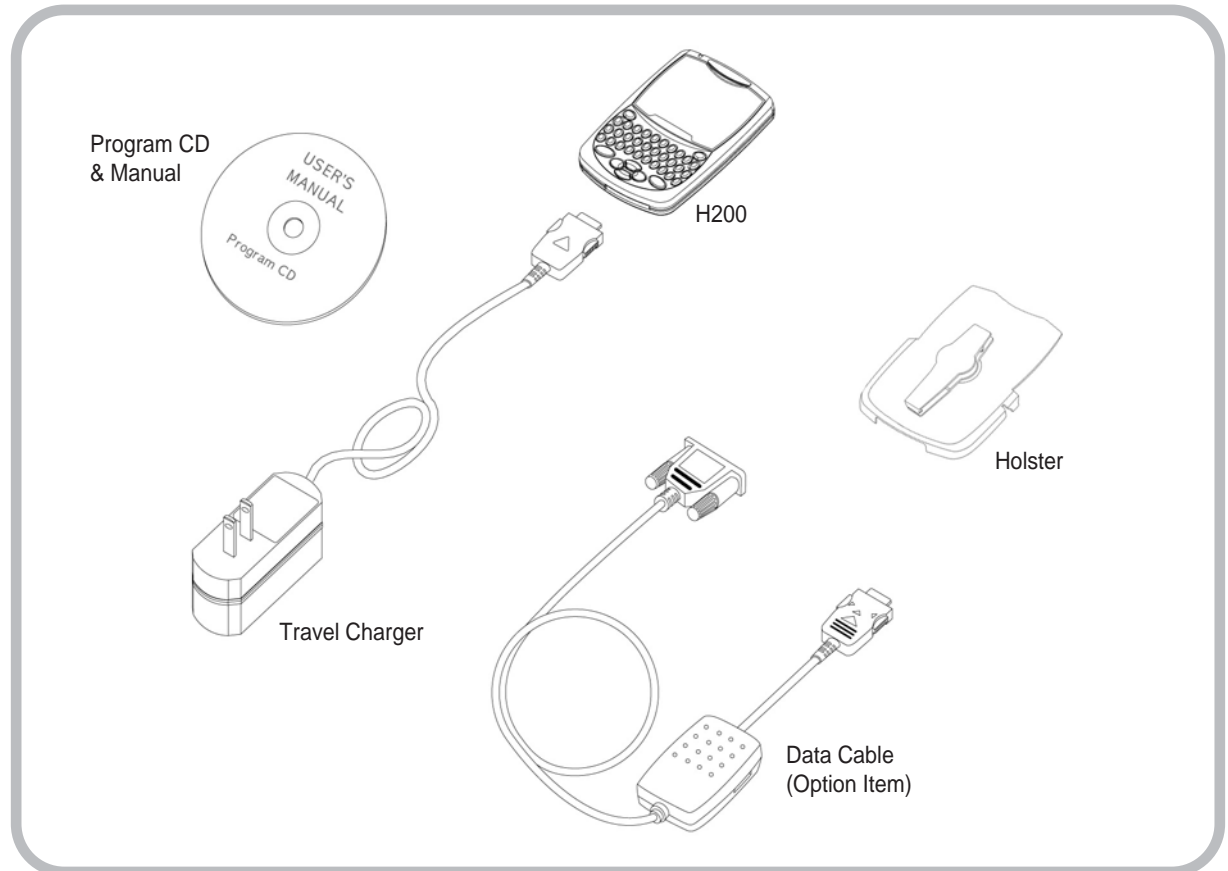


### \*Note :

When you unpack H200 box, you are requested to push reset switch to the left using pointed tool after uncover the Rubber cap in the bottom of Device. (Please refer to the 4.2 How to reset the Device.).




## 2.2 How to charge battery

 Battery is not charged when you first purchase the device. You must charge the battery full before using the device as below instruction.

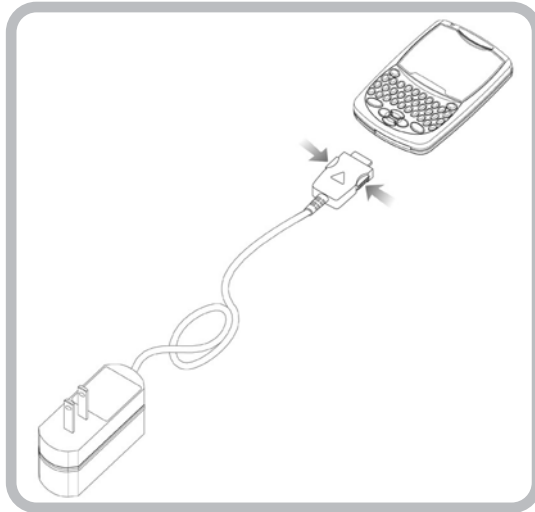

<Charging the device>

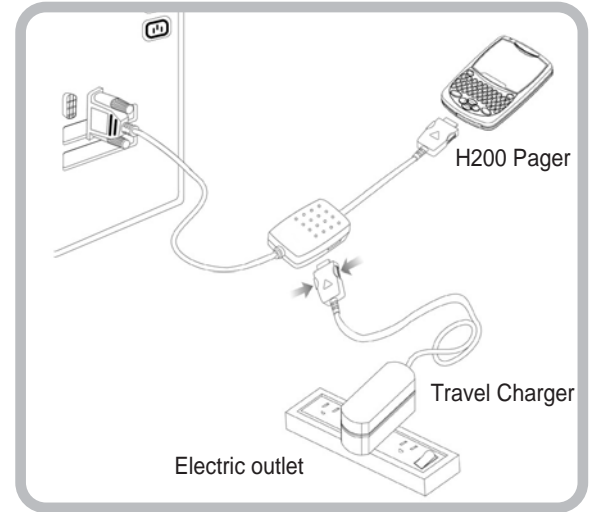 



<Charging the device with Data Cable>

1. Plug your charger into a main socket first.
2. Insert the DC plug of the charger into the bottom of device. “▲” on DC plug must face up.
3. Charging is complete when the LED on device is colored green.
4. When the charging is complete, please unplug your device from its charger, grasp and pull the plug, not the power cord.

### Battery Charging Indicator

	Charging in process	Charging completed
LED in Device	Red light	Green light
Charger Indicator	Red light	Green light

 
#### \* Note :

1. Time to complete Battery charging is approximately two to three hours.
2. You can send and receive message while charging your device.
3. Battery Life time with one time full charging is about 7 days in normal Network Service Condition.
4. Standby time of battery may be reduced if device is in the No Network Service area.
5. If the battery is drained out completely and H200 is turned off automatically, you need to charge the battery for 5 ~ 10min. to turn on H200 again.
6. If the battery level is less than 20%, Warning message will be displayed and you are requested to charge the device soon. In order to release the warning message, press  key or  key.



### 2.3 Using the Holster

1. Please attach the Holster to your Belt.
2. Insert the H200 into the Holster with LCD display facing inward as shown in below Figure.
3. Please note the Holster rotates 90° in both direction. Forcing the Holster rotated more than 90° in either direction can damage it.

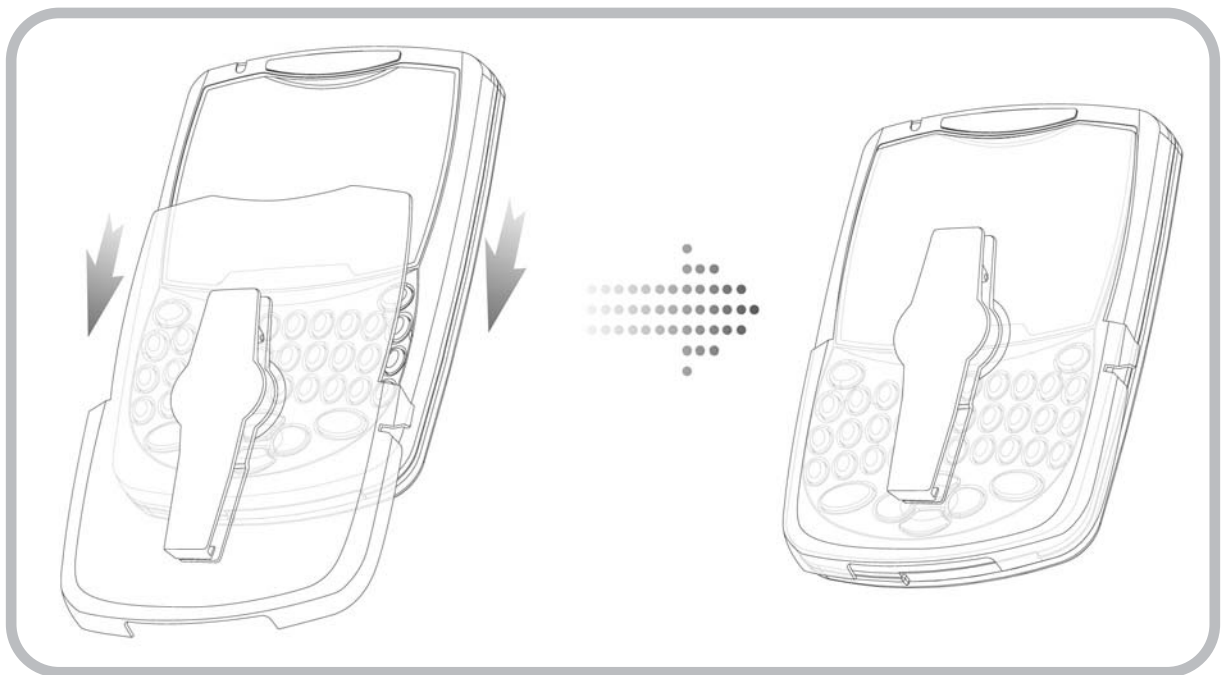





Your new H200 ReFlex Two Way Messenger provides you with the proven reliability that has made us one of the leading Wireless Messenger providers. You can get clear and uninterrupted messenger communication with H200.

Your new H200 ReFlex Two Way Messenger provides you with the proven reliability that has made us one of the leading Wireless Messenger providers. You can get clear and uninterrupted messenger communication with H200.

### 3.1 Description of H200

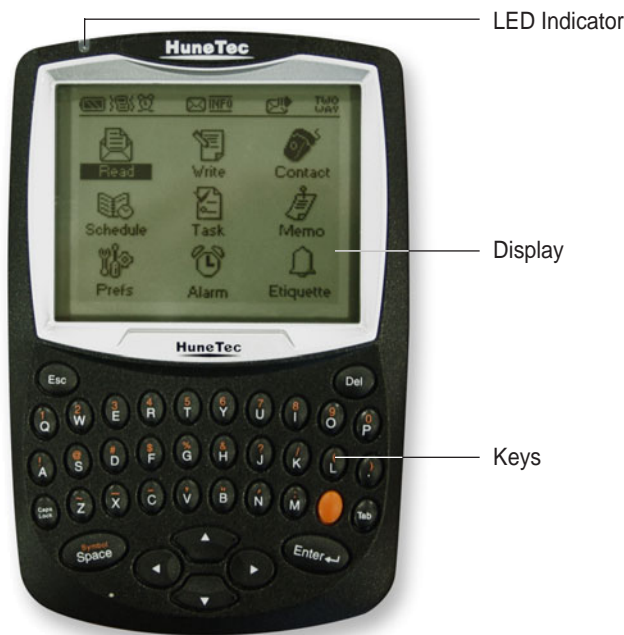 

< Front Panel >

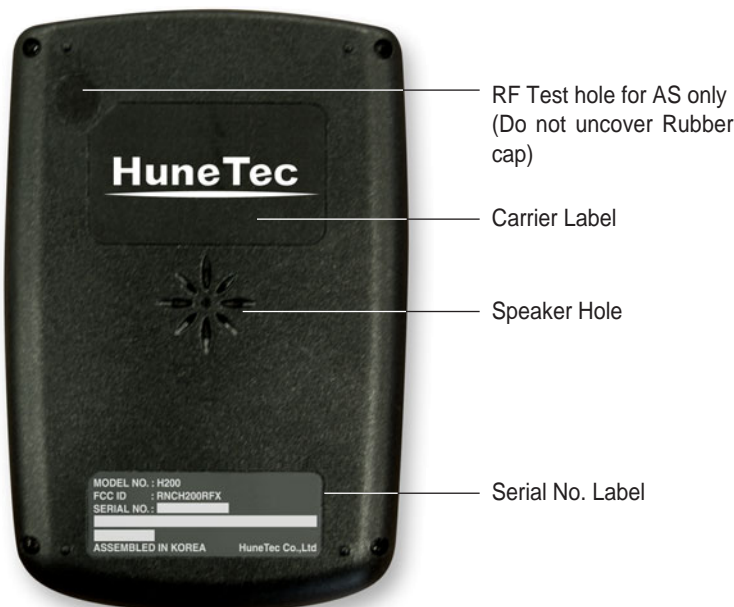 

< Back Side >



< Left Side >



### 3.2 Status Icons in the Main menu display

You can see the status of the device with the Top line icons in Main menu. Following shows you the description of each status Icons.

 
Icon	Description
	Appears when device is on 1 WAY mode. You can receive message only.
	Appears when device is on 2 WAY mode. You can send and receive message.
	Appears device is on No Service mode. You are out of service range.
	Shows the level of battery status. The more bars you see, the more power battery has remained.
	Appears when keyboard is locked by Hold key in left side of device.
	Appears when device is locked by password. You must input correct 4 digits password to use device.
	Appears when Vibrator is selected in Etiquette menu.
	Appears when Mute is selected in Etiquette menu.
	Appears when Caps / Lock mode is turned on.
	Appears when Caps mode is turned on.
	Appears when sending message is in process.
	Appears when new message has been received or unread message remains in Inbox.
	Appears when Alt lock mode is turned on.
	Appears when Alt mode is turned on.
	Appears when sending message is failed.
	Appears when sending message is succeeded.
	Appears when device is in roaming status.
	Appears when device is in campus status.
	Appears when device is in limited roaming status.
	Appears when new news / Info message has been arrived.
	Appears when alarm is set.



### 3.3 Icons for message List

Icon	Description
	Shows unread message.
	Shows read message.
	Shows duplicated read message.
	Shows duplicated unread message.
	Shows sending failed message.
	Shows the message on sending process.
	Shows the message on queuing process for sending.

### 3.4 Key Description

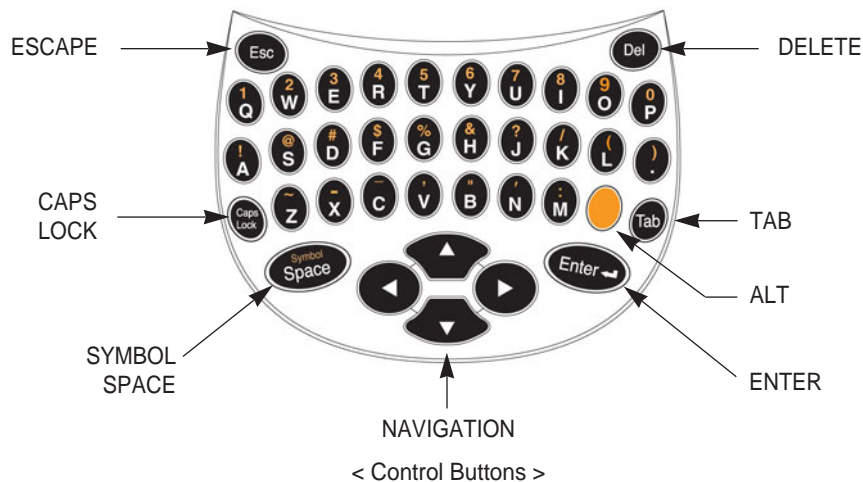

Control Button	Description
	Escape Press to return to the previous screen without accepting any changes. Also, press to access the initial screen from the main menu screen.
	Caps Lock Press to capitalize the next typed letters. Caps Lock -- Press button two times to activate the Caps lock mode (uppercase letter). To exit, press again.
	Symbol/Space Space: Press to insert a space in text. Symbol: Press ALT key and then Space key to activate Symbols during editing. Fourteen (14) symbols are available at the bottom of the screen.




Control Button	Description	
	Enter	Press to select the highlighted option or to save settings.
	Navigation	Press left, right, up, down buttons to move within a field (Text field, List field, Button field).
	Alt	Activates the Alt-mode control keys (color-coded amber). The next key pressed activates an Alt-mode function (text for colored amber). Press Alt key two times to activate Alt Lock mode (all numbers and special characters). To exit, press again.
	Tab	Press to move to the bottom menu field from the text field. To exit, press  or  key.
	Delete	Delete one character to the left of the cursor or delete the message from the message list and/or message view screen.

### Space / Symbol Display

 Symbols can be used in all edit screens.

Symbol box appears when you press key in ALT mode as shown in below sample image. You can select the character you want with key and press key to add the corresponding characters.

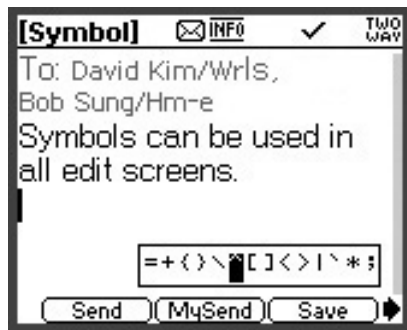

### How to use Keys

- Press key to move to bottom menu and press or key to exit.
- Use Navigation key to move a cursor. ( )
- Use or key to move in the upper box of list screen.  
And use or key to view long text in the lower preview box.
- Always use key to select.



### 3.5 Display in the Initial screen

Initial Screen shows you the status of device as well as initial message and current Time.



Status Icon Area

Initial Message Area

Time & Date Area

Function Key Area

<Initial Screen>

 
#### Function Key

You can go to the Major menu directly from the Initial Screen pressing the navigation key as below.

 
- ◀ Key : Go to Inbox menu directly
- ▶ Key : Go to Write menu directly
- ⬆ Key : Go to Contact menu directly
- ⬇ Key : Go to Scheduler menu directly

### 3.6 Display in the Main menu screen

You can go to the main menu screen from the Initial Screen by pressing any key with the exception of ◀ ▶ ⬆ and ⬇ keys (navigation keys).

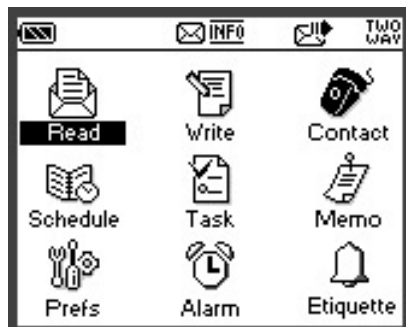



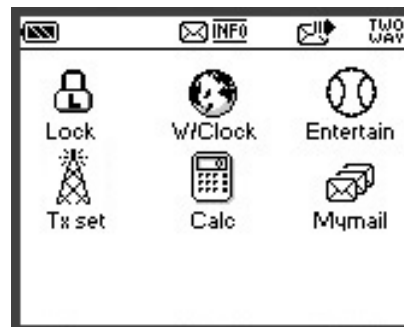












<Main Menu Screen 1>



<Main Menu Screen 2>



## &lt; Main menu icons &gt;

Icon	Description	Icon	Description
	Read Message		Etiquette
	Write Message		Lock
	Contacts		World Clock
	Scheduler		Entertainment
	Task		Tx Set
	Memo		Calculator
	Preference		Mymail (option)
	Alarm		

**3.7 LED INDICATOR**

Your device LED radiates 3 Color light

- \*When new message arrived - Yellow Green Color
- \*During device charging with charger - Red Color
- \*When device complete charging - Green Color



### 4.1 How to switch device on and off

Press and hold  Button on the left side over 3 sec to switch device on.

Press and hold  Button on the left side over 4 sec to switch device off.

**\* Note :**

 
When you unpack H200 box, you are requested to push reset switch to the left using pointed tool after uncover the Rubber cap in the bottom of Device and then H200 will be turned on.

### 4.2 How to reset device

In case of abnormal operation with H200, you may reset the device with the reset switch on the bottom side. You can uncover rubber cap on the bottom of device and find reset switch which is colored blue. And then, push reset switch to the right and return to the left again by using pointed tool.



**\* Note :**

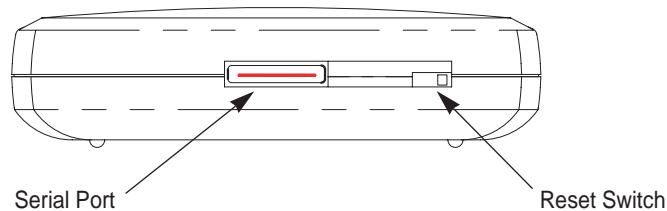When you reset your device, the volatilized data in Inbox and Sentbox which does not saved in Flash memory shall be removed. Your device moves the volatilized data to Flash memory at 02:00 am everyday and when the battery level becomes below 20%.



### 4.3 How to turn on backlight

The LCD Screen and keyboard keys can be backlit by pressing  button.

Press  button for 2 sec to turn on backlight and the backlight shall be turned off automatically when the device has been idle for some time or when you press  button again.

### 4.4 How to lock keyboard



If you want to lock all keyboard, pull  Switch down which is located in left side.

 
To exit, pull  Switch up.



Your new H200 ReFlex Two Way Messenger provides you with the proven reliability that has made us one of the leading Wireless Messenger providers. You can get clear and uninterrupted messenger communication with H200.

You can read and respond to incoming messages & Info, forward and delete messages. It also allows you to manage Inbox, Info, Draft, Personal / Business / Misc folders, Outbox, Sentbox and Delete menu.

<Figure Read-1> appears when you select  in the main menu screen.  menu has the following 9 sub menus.

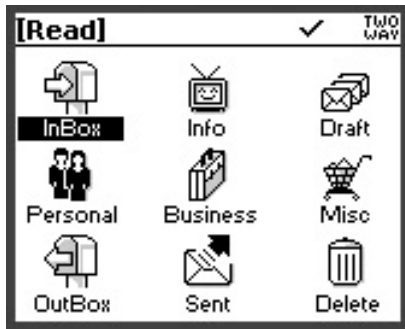

< Figure Read-1 >

You can move to the message folder you want using  keys and press  key to select the relevant folder. Also, you can move to the folder you want directly pressing the initial alphabet such as “I” for “Inbox”.

## 5.0 When a new message arrives

When you receive a new message, Popup box appears as shown in <Figure Recv-1> screen.

If you want to read a message at that moment, select **YES** to go directly to Inbox Message view screen. If not, select **NO** to go back to the previous screen.



<Figure Recv -1>

### \* Note :

If you receive a new message during writing a message or setting the device, please select **NO** not to lose the contents you made.



## 5.1 Inbox

 
All received messages are saved in Inbox folder. <Figure Inbox-1> appears when you select Inbox in the Read menu screen.

Upper box shows the message list with an Icon indicating its status and lower box shows the contents of message.


↕ ↘ direction key is used to move the message you want to read in the list.

And ⬅ ➡ direction key is used to read the contents in the Message Preview box if the message is long.

Press **Enter** key to open the message while the list is selected for viewing in <Figure Inbox- 2>.

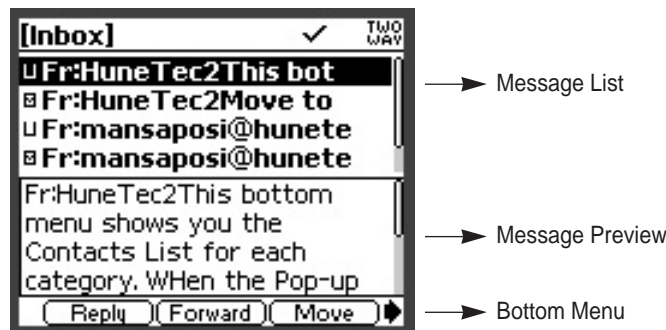

<Figure Inbox-1: Inbox MSGS>

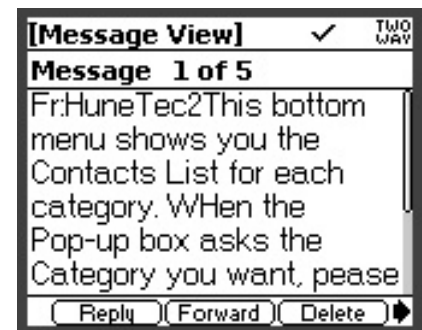 

<Figure Inbox-2: Message View>

### \* Note :

You can easily delete the highlighted message in Inbox MSGS list screen pressing the **Del** key.

After reading the message view, you can select the function of bottom menu in <Figure Inbox-1> and / or <Figure Inbox-2> by pressing the **Tab** key.

You can move to the bottom menu you want using the ⬅ and ➡ Key and press **Enter** key to execute the function.

### Feature of Bottom Menu

#### (1) Reply

When you select the **Reply** in bottom menu, the <Figure Reply-1> will be opened.



<Figure Reply-1>

If you want to write a new message in <Figure Reply-1>, select the **Custom Reply** menu to display the screen in <Figure Reply-2>. If you want to send multi-choice or canned message, select the message you want with ↕ ↘ key and press **Enter** key. Then, the selected message will be sent immediately.






&lt;Figure Reply-2&gt;

After selection of **Custom Reply**, write the relevant message in <Figure Reply-2> and select in the bottom menu to send the message. If you select **Q-text** in the bottom menu, the list of text you stored in Pref. menu will be opened as shown in the screen of <Figure Qtext-1>.



&lt;Figure Qtext-1&gt;







Select the content you want to enter among the lists with   key and press  key. Then the text you selected will be added to your message.

**\* Note :**

Refer to Q text menu function in Preference.

**(2) Forward**

You can forward the received message to other address as below.

- Select the **Forward** in the bottom menu with  key during the <Figure Wirte-1> is opened.
- Select the address in your address book or add the One Time Address / New address by pressing  key.
- Select the **Compose** in the bottom menu using  key and press  key.
- Add any text to Message if you want.
- Select the **Send** in the bottom menu using  Key and press  key.

 
**\* Note :**

You can refer to the Write menu for more detail information.

**(3) Move**

If you select **Move** in the bottom menu, the screen of <Figure Move-1> appears and you can move the message you select to the other folder.

After selecting the folder you want among three folders (Personal, Business, Misc) with keys, press to move the message to the selected folder. Then, the message will be moved to the selected folder.

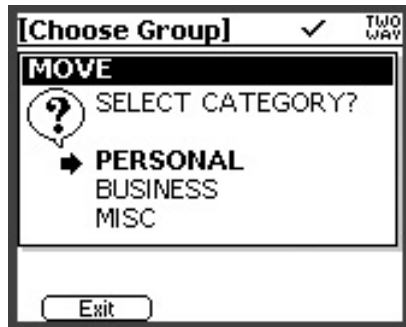

&lt;Figure Move-1&gt;

**4) Delete**

Select **Delete** in bottom menu to delete the current highlighted list and/or opened contents.

 
Then, popup box "Delete entry?" as shown in the <Figure Delete-1> will be appeared.

Select "Yes" if you want to delete, and "No" if you don't want to delete using key and key.

Press key to go back to previous screen.

**\* Note :**

You can delete the message pressing key in Inbox List Screen or Message View Screen.

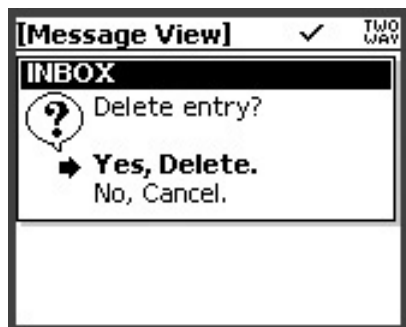

&lt;Figure Delete-1&gt;



## 5.2 Information


Info folder saves all Info messages from your service provider and display information data if you are subscribed to news/information services.

Select Info icon to display <Figure Info-1>. Regular information comes in this folder.

You can save up to 16 kinds of information. If you select Info you want to view, <Figure Info-2> screen appears.

Select the message you want in <Figure Info-2> screen and press  key to display <Figure Info-3> screen.

 You can Forward, Move or Delete the information data using the bottom menu of <Figure Info-2> and <Figure Info-3>.

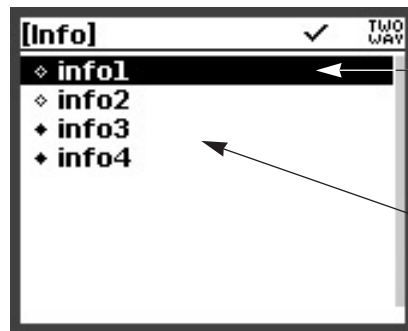

<Figure Info-1>

This icon shows that there are read news.

This icon shows that there are unread news.



<Figure Info-2>

News List

News Preview

Bottom Menu



<Figure Info-3>



### 5.3 Draft

You can record and save the message temporarily in this folder.

If you select **Save** function in the bottom menu during writing a message, the message is saved in this folder. And if there is a new arrived message during your composition and you open the new arrived message, the composed message shall be saved to Draft Folder automatically. Initial screen is as shown in the screen of <Figure Draft-1>.



<Figure Draft-1>



<Figure Draft-2>

#### \* Note :

You can save the messages in Draft folder up to 20 messages.

#### 5.3.1 Editing the Draft message

If there is any draft message you want to modify, press **Enter** key when the list is highlighted. Then, the screen of Draft View Screen <Figure Draft-2> will be opened so you can modify. And you can save the modified draft message in Draft folder again selecting the **Save** in the bottom menu.

#### 5.3.2 Sending the Draft message

If you want to send the message from the Draft Folder, select the **Send** in the bottom menu from the Draft Screen and/or Draft View Screen. Then, screen moves to the screen of <Figure Write-1>. And follow the Writing Process to send a message.

#### 5.3.3 Deleting the Draft message

If you want to delete the relevant draft message from the Draft Screen and/or Draft View Screen, select **Delete** in the bottom menu. Select "Yes" when "Delete entry?" pops up.

Or you can delete the highlighted message pressing **Del** key in Draft List Screen<Figure Draft-1>.



### 5.4 Personal / Business / Misc

These folders allow you to classify Received messages and/or Sent messages according to kinds of messages. You can select the message in these folders and then send the message using **Forward** in the bottom menu. And you can follow the instruction same as the Write menu.

If you want to move the message to other folder, please select **Move** in the bottom menu.

You can delete the message from these folder selecting **Delete** in the bottom menu.

An example of Personal folder is as <Figure Personal-1> and the others are same as it.

 


<Figure Personal-1>

### 5.5 OutBox

This folder is to show the message on sending process or the failed message to be sending. When Outbox folder is selected, screen of <Figure Outbox-1> will appear.

You can **Resend**, **Forward**, **Move** or **Delete** the highlighted and / or selected failed message using the bottom menu in this folder. Follow the same procedure as Inbox menu. However, it is not possible to **Resend**, **Forward**, **Delete** and **Move** the message which is on sending process.

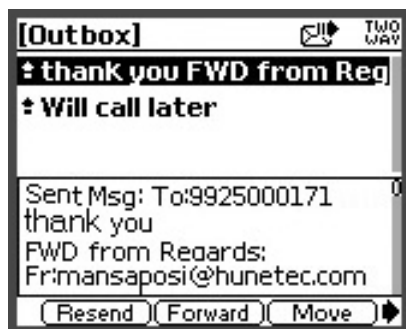

<Figure Outbox-1>



## 5.6 Sent

 
This folder is to show the messages successfully sent.

Screen of <Figure Sent-1> will appear when you select Sent menu.

You can **Resend**, **Forward**, **Move** or **Delete** the highlighted and/or selected message using the bottom menu in <Figure Sent-1> Screen and <Figure Sent-2> Screen. Follow the same procedure as Inbox menu.



<Figure Sent-1>

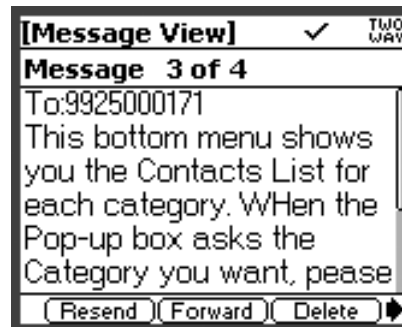


<Figure Sent-2>


## 5.7 Delete

 This folder allows you to delete all messages in storage box one time. It will display the Delete screen of <Figure Delete-1>, <Figure Delete-2> when this folder is selected.

When each storage box is selected with key, press key, Then, a popup box "Delete entry?" appears. Select "Yes" to delete all messages or select "No" if you don't want to delete.

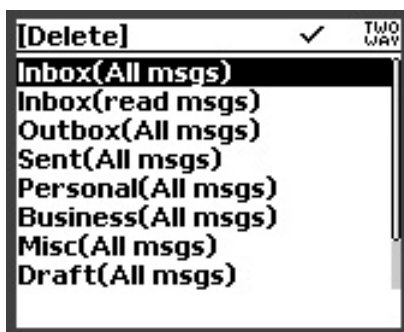


<Figure Delete-1>

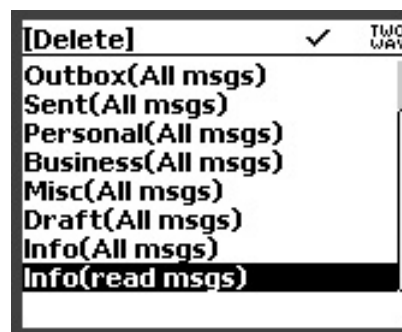 


<Figure Delete-2>

If you select Info groups, the kinds of Info will be shown in <Figure Delete-3> Select and delete the kinds of Info you want here..

 
If you want to clear all Info. Folders one time, please select "All of Info Data" or "All of Info Read Data" .

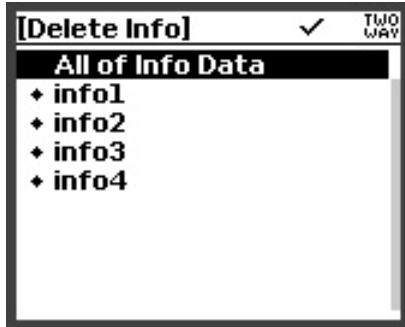

<Figure Delete- 3>

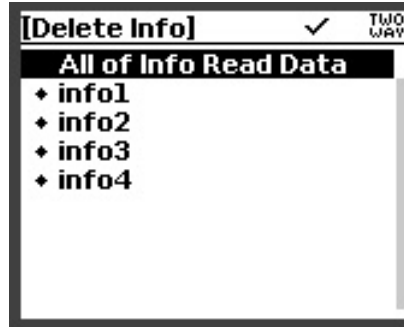 

<Figure Delete- 4>

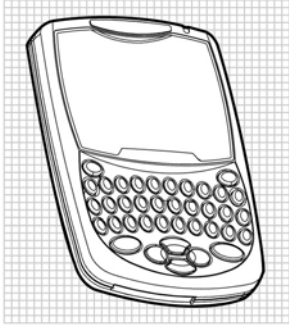 

Your new H200 ReFlex Two Way Messenger provides you with the proven reliability that has made us one of the leading Wireless Messenger providers. You can get clear and uninterrupted messenger communication with H200.

You can compose a message using the QWERTY keyboard, and insert Quick text and other features in this menu and can send messages to wireless and email addresses.

## 6.1 How to select the addresses

Select Write in the Main menu screen using key and press key. Then, the Select Address Screen <Figure Write-1> will be displayed.

 
If there exists the contact you want to send a message in the address book, move to the relevant contact with key and press key for selection. Then “ ✓ ” shall be showed in front of the selected address.

When you select the **One Time Contact**, the screen of <Figure Write-3> appears so that you can directly enter the address to be used one time only and press key.


When you press key after entering the one time address, the cursor moves to **Compose** in the bottom menu. You can also add new address by selecting **New Contact** in the screen of <Figure Write-1>. You can follow the Contact procedure after selecting **New Contact**. After entering new address, select the **Save** function in bottom menu. Then, it will return to the screen of <Figure Write-1> and checkmark appears in the new address.

### \* Note :


For quick searching the address of contact you want, type the alphabet of the name. Then, cursor will move to the relevant contact directly. For example, if you want to find recipient “Sunim Kim ” as shown in Figure write-2, type “Sunim kim ” regardless of small or capital letter. Then, the cursor will move to the relevant address directly.

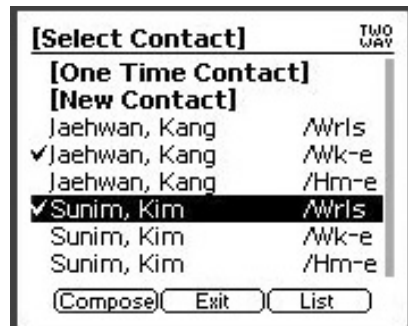

<Figure Write-1>

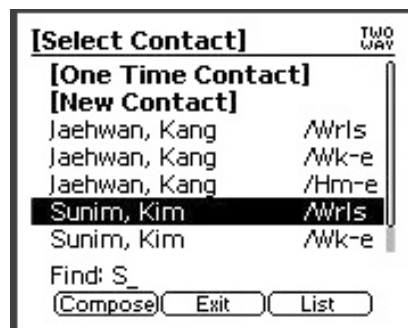 

<Figure Write-2>

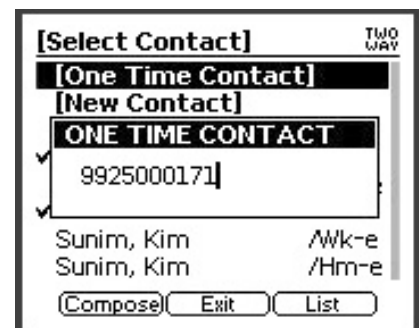 

<Figure Write-3>



### Feature of Bottom Menu

#### (1) Compose

 
If all addresses are selected with '✓' mark, select **Compose** in the bottom menu to compose a message. Press **Tab** key to move to bottom menu and **Enter** key when **Compose** is highlighted. Then, the screen of <Figure Write-5> appears.

#### (2) Exit

Return to the previous menu screen.

#### (3) List

When you select the **List** in the bottom menu, the screen shows the list of the selected contact as <Figure Write-4>. If there is unnecessary address among the list, you can delete the address using the **Delete** in the bottom menu. If you select the **Return**, it will return to the previous screen.

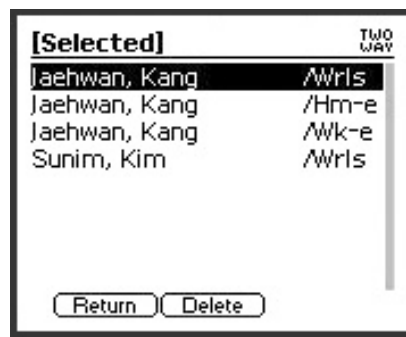


<Figure Write-4>

## 6.2 How to compose message

 After selection of addresses you want, select **Compose** in the bottom menu.

<Figure Write-4> will be displayed and you can compose your message with QWERTY keyboard and bottom menu.

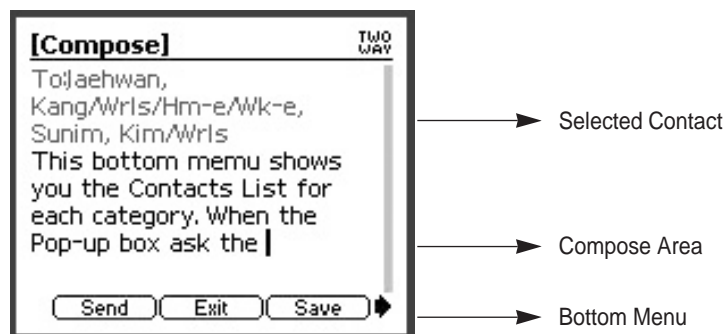

<Figure Write-5>



### Feature of Bottom Menu

#### (1) Send

Edit and/or modify the message as you want in <Figure Write-5> screen and select **Send** in the bottom menu to send a message to the contact you selected.

#### (2) Mysend (option item for Service provider)

Edit and/or modify the message as you want in <Figure Write-5> screen and select **Mysend** in the bottom menu to send a message to the contact you selected through the Mymail address which was set in MyMail Server. (Detailed information for **Mysend**, please contact the Service provider.)

#### (3) Save

Select the **Save** function in the bottom menu in <Figure Write-5> screen to save the message to the Draft folder and then it will return to Main Menu Screen. The contacts you selected are not saved in Draft folder.

#### (4) Edit To

Edit To function enables to go back to the screen of Select Contact for adding the address.

After adding the necessary Contact, you can return to the previous screen selecting **Compose** again in the bottom menu.

#### \* Note :

If you want to add the other address during composing the message, you can press **Esc** key or move the cursor **To field** and press any key. Then, it will return to the screen of Select Contact.

#### (5) Q-text

Q-text function enables you to add Q-text which was set in Preference. You can select the Q-text you want with **Up** key and press **Enter** key. Then, the highlighted text will be added to your message. Please refer to the Preference for detailed information.

#### (6) Replies

If you select **Replies** in the bottom menu of <Figure Write-5> screen, you can add the Option of Replies you want. After adding the wanted replies up to 16 items (max.), save them using the bottom menu with **Tab** key and **Enter** key. Then, the Replies will be sent together with the message you compose. Refer to the <Figure Wirte-6>.

The screenshot shows a screen titled "[Replies]" with a "TWO WAY" indicator in the top right corner. Below the title is a list of seven numbered options:

1. Yes
2. No
3. Thank u!
4. |
5. \_\_\_\_\_
6. \_\_\_\_\_
7. \_\_\_\_\_

At the bottom of the screen, there are two buttons: "Save" and "Cancel".

<Figure Write-6>



Your new H200 ReFlex Two Way Messenger provides you with the proven reliability that has made us one of the leading Wireless Messenger providers. You can get clear and uninterrupted messenger communication with H200.

 
You can store the address information of each person or group you might want to contact. You can include name, email address, work & home phone number and even address for each contact entry.

## 7.1 Contact List (Screen showing the list of stored address)

Contact List shows contacts which are already saved. You can move to the contact you want with key and the **Preview box** in the bottom shows Wireless no., e-mail, Tel / Fax No. of the highlighted contact. In order to check the each Tel / Fax No., press the key to move to the next item in Preview box.

If you press the key during the contact is highlighted, you can move to Contact View Screen <Figure Contact-3>. You can check the contents and/or edit the selected contact with bottom menu using key and Key.

For editing the contact, you can refer to the Features of bottom menu below.

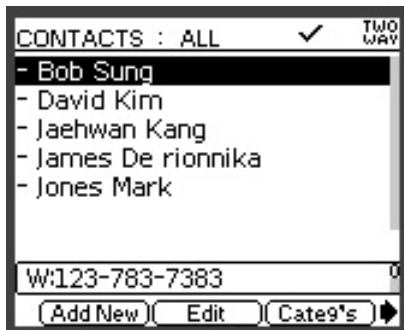

<Figure Contact-1>

### Feature of Bottom Menu

#### (1) Add New (Adding a New Contact to the Address Book)

 
In order to add a new contact, you can select the **Add New** in the bottom menu with key and key. It moves to Contact New screen <Figure Contact-2.1> and you can enter new contact information. To move to the next page, you can select the **Next** in the bottom menu using key and press Key. To save the new Contact, select the **Save** in bottom menu using key and press key. Then, Pop-up box will be displayed for selecting the Category. Please select the Category you want using Key and press key. Then, the New Contact will be saved to the Category you select.

#### (2) Edit

In order to edit and modify the highlighted contact, please select the **Edit** in the bottom menu using key and press key. You can edit and modify the highlighted contact with this bottom menu. It will move to Contact Edit screen <Figure Contact-4.1> for the selected contact. After editing, you can save the contents using the **Save** in bottom menu. key can be used to return to the previous screen without saving.

**(3) Categ's**

This bottom menu lets you select the Contacts List for each category. When the Pop-up box asks the Category you want, please select the category using key and press Key. Then, it shows the contact list for the selected category.

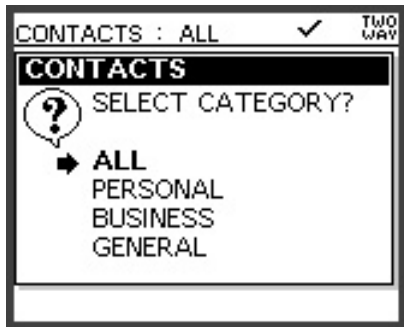

&lt;Figure Contact-2&gt;

**(4) Delete**

You can delete the highlighted contact with this bottom menu. If you select **Delete** in the bottom menu, the Pop-up box asks you if you want to delete entry. Select the "Yes" if you want to delete and select "No" if you don't want. And press Key.

**(5) Show as**

You can select the Name type for Contact List in this bottom menu (First name, Last name or Last name, First name).

**7.2 New Contact (Screen for Entering New Address)**

In order to add New Contact, please select the **Add New** in the bottom menu in Contact List Screen. Then, <Figure Contact 2-1> will be displayed.

&lt;Figure Contact-2.1&gt;

&lt;Figure Contact-2.2&gt;

&lt;Figure Contact-2.3&gt;



Please add the Contact information you want. You can use key or Key to move to the item you want and enter the information using the Alphabet character and number Key. For Telephone/Fax number, you can enter number, #, (, ), x, - only.

To move to the next page, select **Next** in the bottom menu. Then, it will move to next page screen <Figure Contact-2.2>, <Figure Contact-2.3>.

Press key to move to the bottom menu and use key or key to move to the bottom menu you want. Press key to execute the selected menu.

Use key to return to the previous menu.

Select the **Save** in the bottom menu to save the new contact to the suitable category you want.

### Feature of Bottom Menu

- (1) Next : Move to the next screen where you can enter address book
- (2) Prev : Move to the previous screen where you can enter address book
- (3) Save : Save the currently entered contents in the address book
- (4) Cancel : Ignore the currently entered contents and go back to the previous screen. (Address book list)

#### \* Note :

key can be used to go back to the previous screen without saving.

## 7.3 Contact View (Screen for Viewing Entered Address)

If you select the highlighted contact pressing key in contact list <Figure Contact-1>, Contact view shows full content of each contact <Figure Contact- 3> . You can move to next screen for the selected contact with key . Use key to move to the following contact list. Press Key to move to the bottom menu.



<Figure Contact-3>



### Feature of Bottom Menu

- (1) Edit : Move to the Contact Edit screen <Figure Contact-4.1> where you can edit the existing address
- (2) Snd MSG : Move to Select Contact screen <Figure Write-1> to send a message to the selected address.

## 7.4 Edit Contact (Screen for Editing Address)

You can edit the highlighted contact if you select the **Edit** in the bottom menu from the Contact List Screen. Use key or key to move to the item you want to edit and edit the contents using **Alphabet** and **number** keys.

In case of phone number, you can enter number, #, (, ), x, - only.

If you want to move to the next page, select **Next** in the bottom menu with key and press key <Contact-4.2>, <Figure Contact-4.3> will be opened.

Features of Bottom menu is same as bottom menu description of New Contact.

[New Contact]		TWO WAY
First:	James	
Last:	De rionnika	
Wireless:	9925000170	
Wk mail:	james@hunetec....	
Hm mail:		
Wk Tel:	111-222-3333	
Hm Tel:	111-987-9999	

<Figure Contact-4.1>

[New Contact]		TWO WAY
M Tel:	011-022-03333	
Fax:	111-222-3334	
Cmpny:	hunetec	
Title:		
Notes:		

<Figure Contact-4.2>

[New Contact]		TWO WAY
W adr:	sungham 6-7	
W City:	Seoul	
W St/Zip:		
H adr:	Kal street	
H City:	NewYork	
H St/Zip:		

<Figure Contact-4.3>

## 7.5 Categories (Screen for Listing Addresses by Group)

This menu is to show classified contact list by group name - All / Personal / Business / General. If you select the **Categ's** in the bottom menu from the contact list screen <Figure Contact-1>, Pop-up box asks you to select the Category you want. Please select the category you want using key and press key. Then, the Contact List for selected Group will be displayed.

CONTS (PERSONAL)	TWO WAY
Bob Sung	
David Kim	
Jaehwan Kang	
James De rionnika	
Sunim Kim	

<Figure Contact- 5.1>

CONTS ( BUSINESS )	TWO WAY
Ys Choi	

<Figure Contact- 5.2>

 
CONTS ( GENERAL )	TWO WAY
Jones Mark	

<Figure Contact- 5.3>




## 7.6 Name Type

You can select the Name type from the Contact List Screen <Figure Contact-1>. Select the **Show as** in the bottom menu from the Contact List Screen. Then Name Type Screen will be displayed as <Figure Contact-6>. Move the cursor to the item you want as shown in Figure Contact -6, and press **Enter** key to select and press **Enter** key again to save. Then, the contact list shall be sorted as per the Name Type you select. Press **Esc** key to cancel.

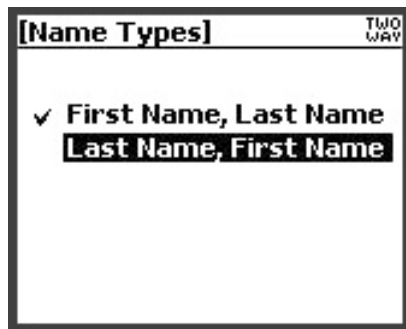

<Figure Contact -6>

 

Your new H200 Reflex Two Way Messenger provides you with the proven reliability that has made us one of the leading Wireless Messenger providers. You can get clear and uninterrupted messenger communication with H200.

You can manage and record your schedule, view calendar and alarm function for each saved schedule event.

### 8.1 Calendar (Screen for showing Schedule and Task)

If you select the Schedule from the main menu screen, the current Calendar shall be displayed. Use , key to select the specific date.

If there exists schedule or task previously entered, the date is underlined.

 
If you press key after moving the box to the underlined date, it moves to View Day screen <Figure Scheduler- 4>. Press key to move to the bottom menu.



<Figure Scheduler-1>

#### Feature of Bottom Menu


- (1) SchEvt : Move to the screen <Figure Scheduler - 2> and you can enter new schedule.
- (2) PrevMo : Move to the previous month.
- (3) NextMo : Move to the next month.
- (4) Exit : Exit from the Schedule and return to Main menu screen.




## 8.2 New Schedule (Screen for Entering New Schedule)


If you select **SchEvt** in the bottom menu to input new schedule event, <Figure Scheduler-2> screen will be displayed.

### \* Note :

 You also can press  key when the cursor is on the date you want to input the new schedule event.

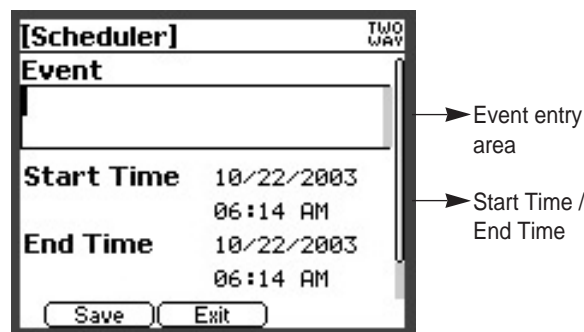

<Figure Scheduler- 2>

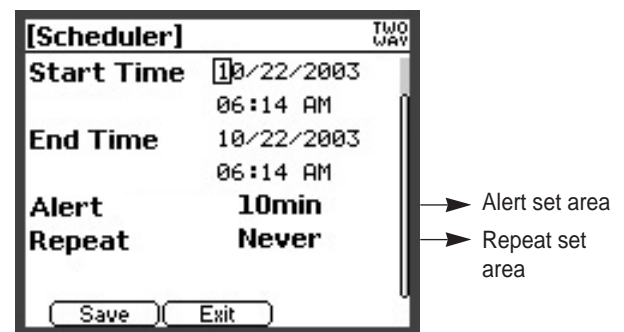 


<Figure Scheduler- 3>

**Event** : Input Schedule title on event entry area.


 
**Start Time / End Time** : Enter the date & time.




If it is 12 hour mode, AM/PM appears. Enter “a” or “A” to change to AM, and enter “P” or “p” to change to PM.

**Alert** : Alert feature enables you to set the time when alarm need to inform you the event.

You can set the alert time using   key and alert time can be set with 12 options (NONE / On Time / Before 5 min. / Before 10 min. / Before 20 min. / Before 30 min. / Before 1 hr. / Before 2 hr. / Before 4 hr. / Before 12 hr. / Before 1 day / Before 7 day )

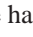**Repeat** : Repeat is to set the event repeatedly during the whole time period you set in Start Time /End Time area.

You can set repeat mode using  and  key. Repeat mode has 6 options-Never / Daily / Weekly / Bi-Weekly / Monthly / Yearly.

After enter all information, move to **Save** in the bottom menu with  key and press  key to save. Use  Key or **Exit** in bottom menu in order to cancel the contents modified.

### \* Note :

You can enter characters, numbers and symbols in Text field and number in date field.


### Feature of Bottom Menu

 
(1) **Save** : Save the contents you entered.

(2) **Exit** : Move to the previous screen without saving.





### 8.3 View Day (Screen for Listing and Previewing Schedule and Task at the Selected Date)

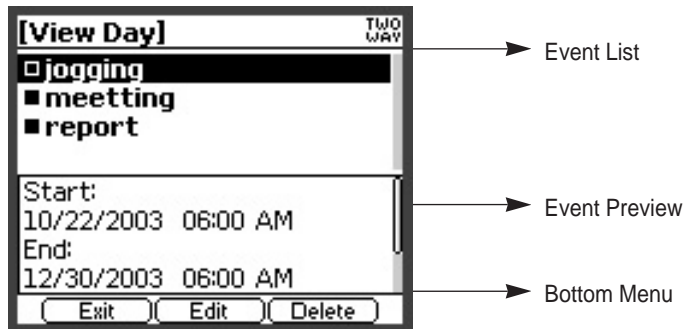
If you press the  key when the cursor is located in the date underlined, View Day Screen shall be opened as <Figure Scheduler-4>.



<Figure Scheduler-4>

If the cursor is located in the list, use   key to move to the item you want. In this case, details will be displayed in the lower Preview Box.

In order to read the whole contents in Preview Box, please use   key for the remaining contents in Preview Box.

If you press  key when one list is highlighted, it moves to Edit Schedule Screen. And you can update the event, if necessary.

While a cursor is located in the List, press  Key to move to the bottom menu.

#### Feature of Bottom Menu

- (1) Exit : Move to the previous screen.
- (2) Edit : Move to the screen for editing/modifying the selected item.
- (3) Delete : Delete the selected Event from the Scheduler.



#### 8.4 Edit Schedule (Screen for Modifying selected Schedule)

You can edit or modify the selected Event when you select the **Edit** in the bottom menu from the View Day Screen.

 
After modifying the contents, please save it or cancel it using the bottom menu.

[Edit Schedule]		TWO WAY
Event	jogging	
Start Time	10/22/2003 06:00 AM	
End Time	12/30/2003 06:00 AM	
Update		Cancel

<Figure Scheduler-5>

#### Feature of Bottom Menu


- (1) Update : Save the contents you modified.
- (2) Cancel : Move to the previous screen without saving.

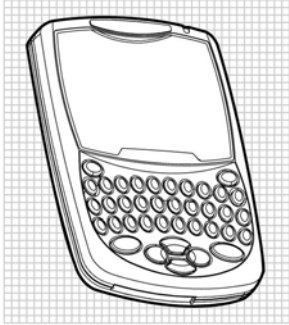

Your new H200 ReFlex Two Way Messenger provides you with the proven reliability that has made us one of the leading Wireless Messenger providers. You can get clear and uninterrupted messenger communication with H200.

You can manage and record To do list with this menu.

 If there is already stored Task, <Figure Task-1> will be displayed with Preview Box including Due date, Status and Priority of each Task.

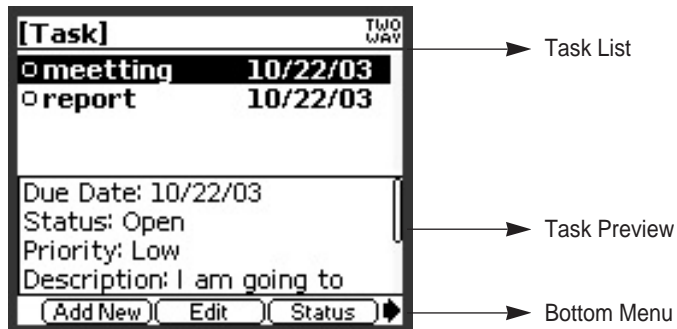

<Figure Task-1>

You can use Key to move to the task list you want and the Preview Box will show the details for the Task highlighted.

In front of each Task List, the status indication is located such as  $\bigcirc$  for open status and  $\emptyset$  for closed status as shown in <Figure Task-1>.

If you want to read the whole contents of the Task in the Preview Box, please use the key to check the remaining / previous contents in Preview Box. Or, press key to move the Task View Screen <Figure Task-3> and check the overall contents.

Press key to move to the bottom menu.

### Feature of Bottom Menu

- (1) Add New : Move to the screen <Figure Task - 2> where you can enter new Task.
- (2) Edit : Move to the screen <Figure Task - 3> in order to modify the highlighted task
- (3) Status : Change status of task highlighted (from Open to Close or Close to Open).
- (4) Delete : Delete the selected task.



### 9.1 New Task (Screen for Entering New Task)

You can input the New Task by selecting the **Add New** in the bottom menu from the Task Screen. Input Task title on subject area and then set the Due date, Status, Priority of task using the key. And then you can add some description if necessary for the Task. Status has 2 options (Open / Close) and Priority has 3 options ( Low / Medium / High). Use key to move to the specific item. Press key to move to the bottom menu.

<Figure Task-2>

#### Feature of Bottom Menu


- (1) Save : Save the contents you entered.
- (2) Cancel : Move to the previous screen without saving.

### 9.2 Edit Task (Screen for Modifying Contents of Selected Task)



You can edit the highlighted Task by selecting the **Edit** in the bottom menu from the Task Screen.


<Figure Task- 3>



Edit or modify Task title on Subject area, Due date, Status, Priority of task and Description using Keyboard and the   Key.

Status has 2 options (Open / Close) and Priority has 3 options (Low / Medium / High).

Use   key to move to the specific item.


Press  key to move to the bottom menu.

#### Feature of Bottom Menu

---

- (1) **Update** : Save the modified contents.
- (2) **Delete** : Delete the current Task.

 
#### \* Note :

Press  key if you want to return to the previous menu without saving



Your new H200 ReFlex Two Way Messenger provides you with the proven reliability that has made us one of the leading Wireless Messenger providers. You can get clear and uninterrupted messenger communication with H200.

You can record your memo and also send the saved memo as message to other addresses. If there is already stored Memo, <Figure Memo-1> will be displayed with Preview Box including Notes.

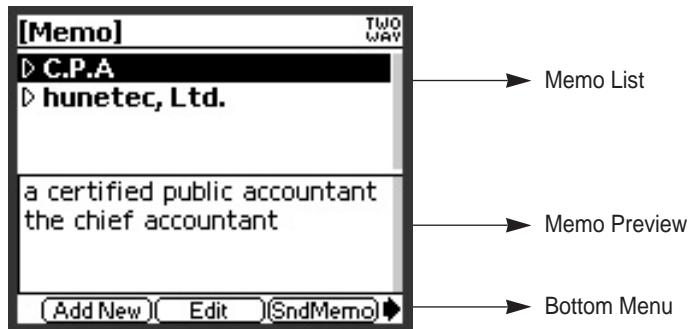

<Figure Memo -1>

You can use Key to move to the memo list you want and the Preview Box will show the details for the Memo highlighted.

If you want the whole contents of the Memo in the Preview Box, please use the key to check the remaining / previous contents in Preview Box. Or, press key to move the Memo View Screen <Figure Memo-3> and to check the overall contents.


Press key to move to the bottom menu.

### Feature of Bottom Menu

 - (1) Add New : Move to the screen <Figure Memo-2> where you can enter new Memo.
- (2) Edit : Move to the screen <Figure Memo- 3> in order to modify the highlighted Memo.
- (3) Snd Memo : Move to the Address Select screen <Figure Write-1> in order to send the contents of highlighted memo as a message. You can select the address you want and follow the write procedure.
- (4) Delete : Delete the selected Memo.



#### \* Note :

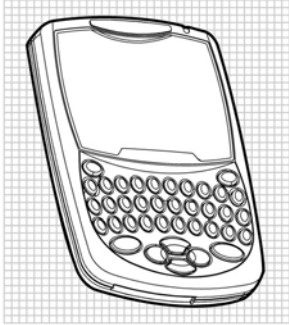Press key if you want to return to the previous screen without saving.



Your new H200 ReFlex Two Way Messenger provides you with the proven reliability that has made us one of the leading Wireless Messenger providers. You can get clear and uninterrupted messenger communication with H200.

## 10.1 New Memo (Screen for Entering New Memo)

You can input the New Memo by selecting the **Add New** in the bottom menu from the Memo Screen. Input Subject and Notes in each area and save it using the bottom menu. Use   key to move the Text field.


Press  key to move to the bottom menu.

<Figure Memo- 2>

### Feature of Bottom Menu

- (1) Save : Save the contents you entered .
- (2) Cancel : Move to the previous screen without saving.

#### \* Note :




Press  key to return to the previous screen without saving.

## 10.2 Edit Memo (Screen for Modifying Contents of Selected Memo)

You can edit the highlighted Memo by selecting the **Edit** in the bottom menu from the Memo Screen.

<Figure Memo- 3>




Edit or modify Subject and Notes on event area.  
You can enter characters, numbers and symbols in Text field.  
Use   key to move to the specific item.  
Press  key to move to the bottom menu.

#### Feature of Bottom Menu

---

- (1) Update : Save the modified contents.
- (2) Delete : Delete the current Memo.

 
#### \* Note :

Press  key if you want to return to the previous menu without saving.

### 10. 3 Send Memo (Send the Memo as a message to other address )


---

You can send the highlighted Memo by selecting the **Snd Memo** in the bottom menu from the Memo Screen. It will move to the Contact Select Screen <Figure Write-1> in order to send the contents of highlighted memo as a message. You can select the address you want and follow the write procedure. The highlighted Memo shall be attached to message.

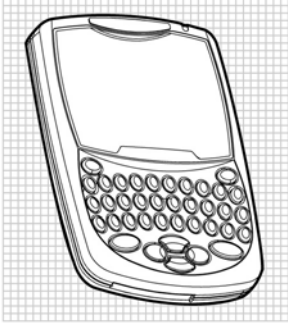

Your new H200 ReFlex Two Way Messenger provides you with the proven reliability that has made us one of the leading Wireless Messenger providers. You can get clear and uninterrupted messenger communication with H200.

 This application provides various features that allow you to select various options and to execute several functions such as Alert Setting, Quick Text and Setup, etc. Select Prefs from the Main menu screen and <Figure Prefs-1> shall be displayed. You can move to the item you want using key and press key to open the highlighted item.

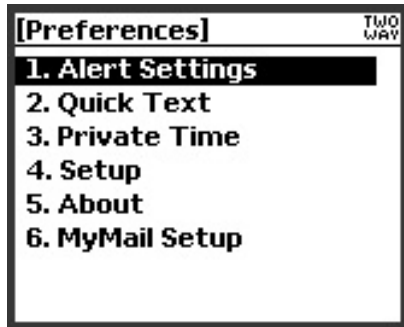

<Figure Prefs-1>

### 11.1 Alert Settings

You can set the various Alert in this menu. Please select **1. Alert Settings** from the Preference Screen and Alert Set Screen <Figure Prefs-2> shall be displayed for your alert setting.

Use key to move to the specific item you want.

You can use key to select Alert type you want.

After selecting all the types of Alert with key in <Figure Prefs-2>, press key to save or press to cancel.




<Figure Prefs-2>



### 11.1.1. Volume

Select Volume you want using the ◀ ▶ key in volume field. There are three options for volume control such as Low/Medium/High.

### 11.1.2. Inbox, Info, Sch & Alm

You can select the preferable alert type using ◀ ▶ key for Inbox, Info., Sch & Alm. These Alert notice you when there is a new message in inbox or a new information in Info. or when it is time for Alarm. For preview Alert, press  key after selecting Alert type you want in Figure Prefs-2 with ◀ ▶ key.

### 11.1.3. Reminder

If you want to be reminded in case there still remains some messages which you don't read, you can select Type of Reminder among One Beep/Two Beep/Off with ◀ ▶ key in the Reminder field.

### 11.1.4. R Interval (Reminder Interval)

You can set the alert interval for Reminder using ◀ ▶ key and alert interval has four options such as 1 min / 2 min / 5 min / 10 min.

### 11.1.5. R Repeat (Reminder Repeat)

R Repeat (Reminder Repeat) is to set no. of times for Alert to be repeated. You can set repeat mode using ◀ ▶ key. Repeat mode has 4 options such as 1 / 2 / 5 / 10 times.

 
## 11.2 Quick Text

You can save the Quick Text in this application so that you can put the texts which are frequently used during your composing messages. You can add or delete the Quick text in this application.

 
Please select **2. Quick Text** in Preference screen.



<Figure Prefs- 3>

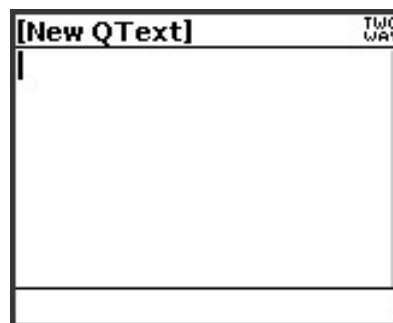

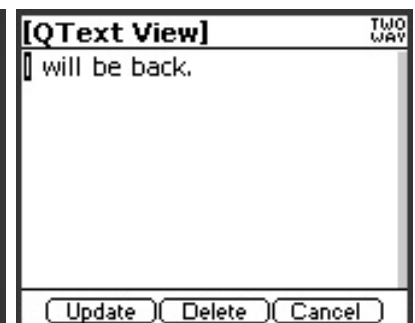


<Figure Prefs- 4>







<Figure Prefs- 5>



#### \* Add a New Quick Text

Please press the  key when [New Text] is highlighted then the Figure Prefs-4 will be displayed. Enter the text you want and press  key to save the contents.  key can be used to return to the previous screen without saving.

#### \* Modify and/ or Editing an Existing Quick Text

Please select the Quick Text you want to modify using the   Key. When the Quick Text which you want to modify is highlighted, please press  key. Then, Figure Prefs-5 will be opened for your editing. Please modify and/or edit the Quick Text and move to the bottom menu with  key to execute **Update** and/or **Delete**.

#### Feature of Bottom Menu


 


- (1) Update : Save the modified contents.
- (2) Delete : Delete the current Quick Text.
- (3) Cancel : Return to the previous screen without saving.

### 11.3 Private Time

If you want to turn off all Alerts during a specific period of time everyday (for Example, during the mid night), select **3. Private Time** in Preference Screen <Figure Prefs-1>. Then, <Figure Prefs-6> will be opened for your setting the Private Time.

[Private Time]		TWO WAY
Start Time	04:00 PM	
End Time	05:00 PM	
Set	ON	
Alert at End	<input checked="" type="checkbox"/> ON <input type="checkbox"/> OFF	

<Figure Prefs-6>

Please enter the private time you want in Start/End field. It will display AM/PM if Time is 12 hour mode. When a cursor is located in AM/PM, press **A** or **a** key for AM, and press **P** or **p** key for PM. Select ON/OFF in Set field with   key. If you want to be alerted at the end of private time for new messages, please set ON for "Alert at End". Press  key to save the private time you set. Press  Key to return to the previous screen without saving.

#### \* Note :

Mute icon will appear in main menu screen when it becomes the private time you set.



## 11.4 Setup

 
In order to set up the various items for H200, select **4. Setup** menu in Preference Screen. Then, the <Figure Prefs-7> will be displayed.



<Figure Prefs-7>

### 11.4.1 Set Date & Time


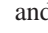
In order to set the current time of Device, select **1. Set Date & Time** in Setup Screen <Figure Prefs-7> and press  key. Then, Date and Time Setup Screen will be displayed as <Figure Prefs-8>. You can move the cursor to the items you want using   Key.

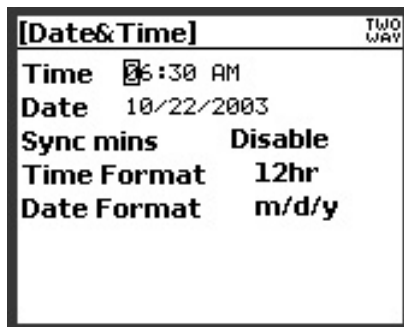
 


<Figure Prefs-8>


\* **Time** : Set the current time in Time field using No. keys. If H200 is in 12 hours mode, AM/PM will be displayed at the end of Time. When a cursor is placed on AM/PM, press **A** or **a** for AM, **P** or **p** for PM.

\* **Date** : Enter the Current Date in Date field using No. keys.

\* **Sync mins** : If you want to set the time information transferred from the station as the time of your device, select Sync mins field in Figure prefs-8 and select **Enable** with   key. If you select the **Disable**, the time you set to the device will be displayed.

\* **Time Format** : Select the Time format to 12hr for 12-hour clock format, or 24hr for 24-hour clock format using   key. If you select 24hr, the AM/PM will be disappeared.

\* **Date Format** : Select the Date format to m/d/y for Month/Date/Year or d/m/y for Date/Month/Year.

Press  key to save the contents you set and check the current date & time in the Initial screen.



### 11.4.2 Display Settings

You can set the Display condition in this menu. Please select **2. Display Settings** from the Setup Screen and press key. Then, Display Settings Screen will be displayed as <Figure Prefs-9>.

<Figure Prefs-9>

\***Contrast** : It is used to adjust LCD Contrast. Adjust contrast with key as shown in Figure Prefs-9.

\***Font** : Select the size of font you want with key. There are two options for Font size such as “Large” and “Small”.

\***Popup Box to confirm** : Pop-up Box can be selected as an option. There are four kinds of Popup Box for **Delete**, **Esc**, **New Msg**, and **Accept**. Select **On** for Popup box to be displayed and **Off** to skip the Pop-up Box.

-**Delete** : Popup box to confirm to delete when the Delete menu is selected or Key is pressed.

-**Esc** : Popup box to confirm the returning to the previous screen without saving.

-**New Msg** : Popup box when a new message is arrived.

-**Accept** : Popup box to save the contents with pressing key.

Press key to save the contents and press key to return to the previous screen without saving.

### 11.4.3 Owner Information


You can set the Owner information in this menu. Please select **3. Owner Information** from the Setup Screen and press key. Then, Owner Information Screen will be displayed as <Figure Prefs-10>.

<Figure Prefs-10>

Please enter your name, Telephone no and E-mail in each field and press key to save the contents.





#### 11.4.4 Signature

You can set the automatic Signature in this menu. Please select **4. Signature** from the Setup Screen and press  key. Then, Signature Screen will be displayed as <Figure Prefs-11>.




<Figure Prefs-11>

 
Press  key to save the contents and/or press  key to return to the previous screen without saving.

\* **Display** : In order to attach your signature automatically in the end of each messages you send, select the **Enable** with   key. If you don't want to attach your signature, select **Disable**.



\* **Signature** : Please enter the signature you want to attach to the messages.

#### 11.4.5 Title Screen

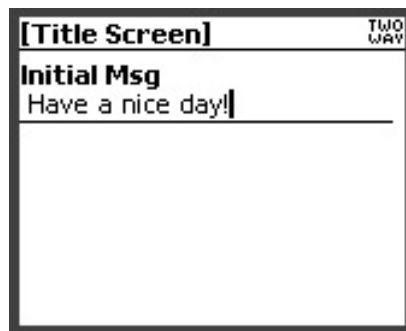
You can set the Title Screen you want for Initial screen in this menu. Please select **5. Title Screen** from the Setup Screen and press  key. Then, Title Screen will be displayed as <Figure Prefs-12>.




<Figure Prefs-12>

Enter the Title as you want in the Initial Msg. Text field and press  to save the contents. Press  key to return to the previous screen without saving.

#### 11.4.6 Key Lock Password

 You can set the Key Lock Password in this menu. Please select **6. Key Lock Password** from the Setup Screen and press  key. Then, Key Lock Password Screen will be displayed as <Figure Prefs-13>.

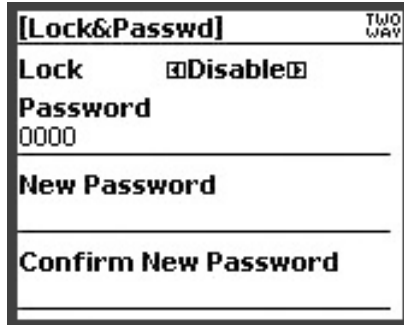

&lt;Figure Prefs-13&gt;

\***Lock** : In order to set key lock function on, select “**Enable**” with key. If you don’t want key lock function, select “**Disable**”. You can change this without password input.

\***Password** : In order to change the password, you need to enter the current 4 digits password. The initial password from the factory is “0000”. If you enter the wrong password, warning pop-up will be opened for Invalid password.

\***New Password** : Enter the 4 digits new password you want.

\***Confirm New Password** : Enter the 4 digits new password again for confirmation.




&lt;Figure Prefs-14&gt;

Press key to save the contents and press key to return to the previous screen without saving.

## 11.5 About

 You can check the current status of device in this menu. Select **5. About** from the Preference Screen and Figure Prefs-15 shall be displayed for your checking.

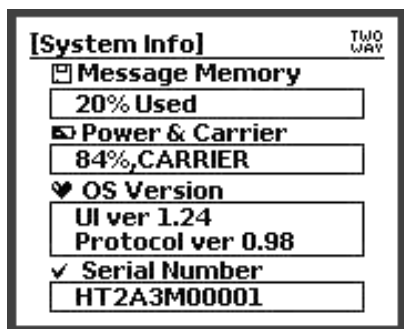

&lt;Figure Prefs-15&gt;

\* **Message Memory** : You can check the status of message memory. If the memory is full and you don’t delete the messages from Inbox and Sentbox, the device will automatically delete the oldest messages in Inbox and Sentbox. If you do not want a message to be deleted automatically when memory is full, you must move that message to Personal/Business/Misc folder.

\* **Power & Carrier** : You can check the battery level and Carrier name.


\* **OS Version** : You can check the current OS version for device.

\* **Serial Number** : You can check the Serial No. for the device.

Press key to return to the previous screen.




## 11.6 Mymail Setup

You can set the Mymail Setup in this menu. Please select **6. MyMail** Setup from the Preferences Screen and press  key. Then, <Figure Prefs-16> will be displayed.

### \* Note :

This is Carrier option menu. So, you are requested to check it with your carrier for the details.

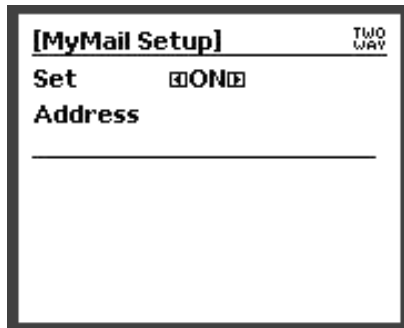

<Figure Prefs -16>

\* **Set** : If you want to set the Mymail on, select the ON with Left/Right key. If you don't want, select OFF.

 
\* **Address** : Please enter the address for Mymail Server. You can check this address with your carrier.

Press  key to save the contents and press  key to return to the previous screen without saving.



Your new H200 ReFlex Two Way Messenger provides you with the proven reliability that has made us one of the leading Wireless Messenger providers. You can get clear and uninterrupted messenger communication with H200.


You can set the alarm on your device. Please select Alarm from the Main Menu Screen and press key. Then, <Figure Alarm-1> shall be displayed.

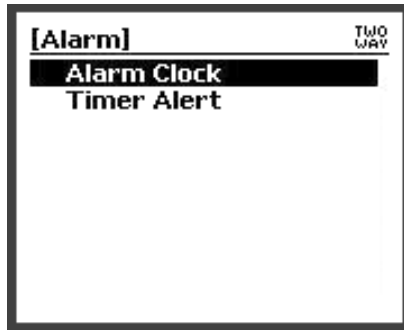


<Figure Alarm-1>

### 12.1 Alarm Clock

 If you want to set the normal Alarm clock, please select Alarm Clock and press key. Then, <Figure Alarm-2> will be displayed.

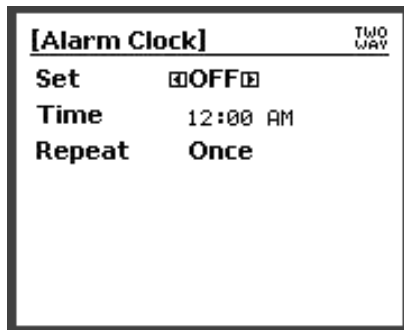

<Figure Alarm-2>

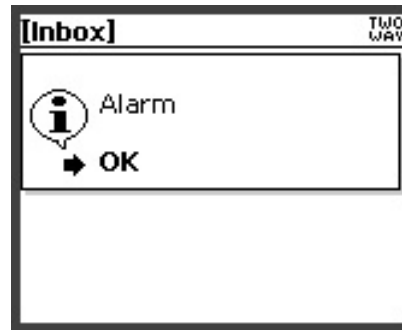 

<Figure Alarm-3>

- \* **Set** : If you want to set the Alarm clock on, select the ON with key. If you don't want, select OFF.
- \* **Time** : Please enter the time you want with No. keys. If it is 12 hour mode, AM/PM appears. Enter **a** or **A** to change to AM, and enter **p** or **P** to change to PM.
- \* **Repeat** : Enter the Repeat mode you want with key. There are two options for Repeat mode-Once / Daily.

After setting for Alarm Clock, press key to save it or press key to return to the previous screen without saving.

Pop-up box as <Figure Alarm-3> will be displayed when alarm is operated. You can stop Alarm pressing any key.



## 12.2 Timer Alert

If you want to set the Timer Alert, please select Timer Alert and press key. Then, <Figure Timer Alert -1> will be displayed.

[Timer Alert]		TWO WAY
<b>Set</b>	<input type="checkbox"/> OFF <input type="checkbox"/>	
Current Time	12:07 AM	
<b>Alert Time</b>	00:00 Later	

<Timer Alert-1>

- \* **Set** : If you want to set the Timer Alert On, select the ON with key. If you don't want, select OFF.
- \* **Current Time** : It shows the current time.
- \* **Alert Time** : Enter the time you want to be alerted with No. keys.




After setting for Timer Alert, press key to save it or press key to return to the previous screen without saving.

Pop-up box as <Figure Alert-2> will be displayed when Timer Alert is operated. You can stop Alert pressing any key.

		TWO WAY
	Timer Alert	
	OK	

<Timer Alert-2>



You can use this menu when you need to be in etiquette mode. Please select the Etiquette from the Main Menu Screen. If you press  key, Alert type will be changed from Sound to Vibrator, from Vibrator to Mute and from Mute to Sound. The selected Alert type status is displayed by Alert Type Icon [   ] at the Status Icon Area.



Your new H200 ReFlex Two Way Messenger provides you with the proven reliability that has made us one of the leading Wireless Messenger providers. You can get clear and uninterrupted messenger communication with H200.

You can lock the keys in this menu. Please select Lock from the Main Menu Screen and press  key to lock the key operation. Then, all keys will be locked except Alt key, Caps key, Hold key and Power key. And <Figure Lock-1> will be displayed.

To release lock in <Figure Lock-1>, enter the correct 4 digits password which you entered in Password field in <Figure Prefs-13>. Then, the lock will be released.

 
If you enter the wrong password, the <Figure Lock-1> will be kept as it is.

**\* Note :**

You need to set the **Enable** and Key Lock Password in Setting menu in advance. (Refer to the 11.4.6 Key Lock Password menu.).




<Figure Lock-1>

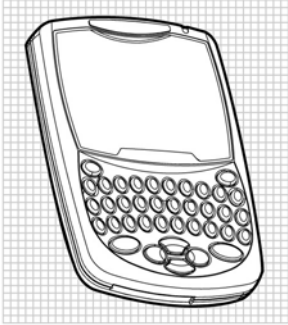

Your new H200 ReFlex Two Way Messenger provides you with the proven reliability that has made us one of the leading Wireless Messenger providers. You can get clear and uninterrupted messenger communication with H200.

 You can easily check the current time for other cities and countries with world map in the menu. Please select World Clock from the Main Menu Screen and press **Enter** key. Then, <Figure W/Clock-1> will be displayed.

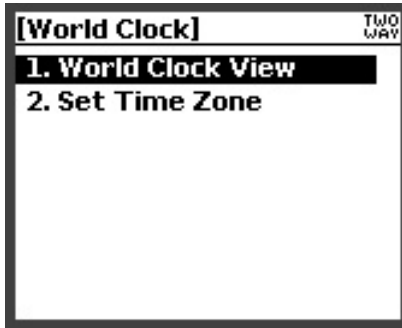

<Figure W/Clock-1>

### 15.1. World Clock View

If you press **Enter** key when **1. World Clock View** is highlighted, Local time you set in Time Zone will be displayed with World Map. Please use **Left** **Right** key to move to the location you want. Then, the each local time will be displayed. Press **Esc** key to exit.



<Figure W/Clock-2>

### 15.2. Set Time Zone

If you press **Enter** key when **2, Set Time Zone** is highlighted, the city list for setting the time zone will be displayed as like <Figure W/Clock-3>. Select your own Time Zone with **Up** **Down** key, and press **Enter** key to select City you want to set as Time zone. Press **Enter** key again to save. Then, it will return to the previous screen after saving. Press **Esc** key to cancel.



<Figure W/Clock- 3>



Your new H200 Reflex Two Way Messenger provides you with the proven reliability that has made us one of the leading Wireless Messenger providers. You can get clear and uninterrupted messenger communication with H200.

You can enjoy the games and other menu in the menu, which the carriers supply. The Black Jack game is supplied as a standard game. If you want to use other entertainment such as E book, please contact the Service Provider for detailed information.

In order to enjoy Black jack game, press the **Enter** key when **Entertain** icon is highlighted. Then Game icon will be displayed. Press **Enter** key again and <Figure Game-1> will be displayed.

 


<Figure Game-1>

Press **Enter** key again to start the Blackjack game.

#### \* Betting

Change the Amount of Betting Money to the number you want using **Up** **Down** key and press **Enter** Key to display <Figure game-2>.

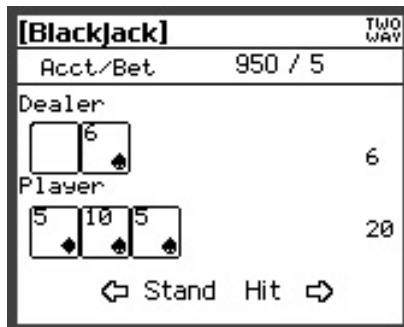

<Figure Game-2>


#### \* Game Main

 When Blackjack game is started, select whether to receive the card or not. If the game is over, the result is displayed as shown in <Figure Game- 3>. At this time, you can change the Betting Money with **Up** **Down** key and press **Enter** key to start new game.

If you press **Esc** key while you are playing, it will exit to Main Menu Screen.




Your new H200 Reflex Two Way Messenger provides you with the proven reliability that has made us one of the leading Wireless Messenger providers. You can get clear and uninterrupted messenger communication with H200.

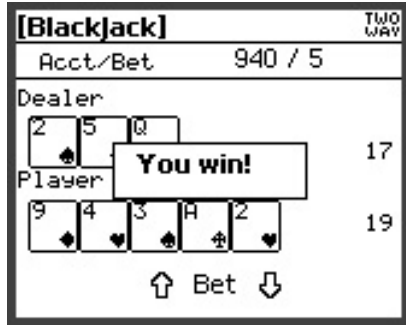

<Figure Game- 3>


**\* Refill the money :**

 You can start the game with 1000 point in total. If you need to refill the money, press **R** key in <Figure Game-1> screen.



Your new H200 ReFlex Two Way Messenger provides you with the proven reliability that has made us one of the leading Wireless Messenger providers. You can get clear and uninterrupted messenger communication with H200.

 You can set TX to On and/or Off in this menu. Please select the Tx Set from the Main menu Screen and press key. Then <Figure TxSet-1> will be displayed.

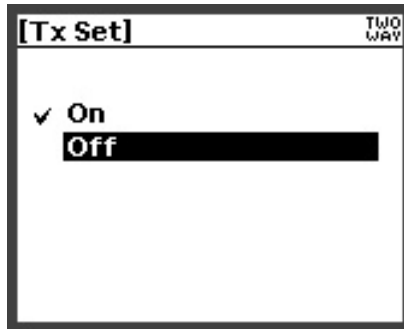



<Figure TxSet-1>

Move the cursor to the place you want, and press to select.

If you select **On** and press key again, the device will operate in Two way mode. If you select **Off** and press key again, the device will operate in one way mode only.


The device will return to Main Menu Screen after saving the Tx mode you select.

  Press key to return to the Main Menu Screen without saving.

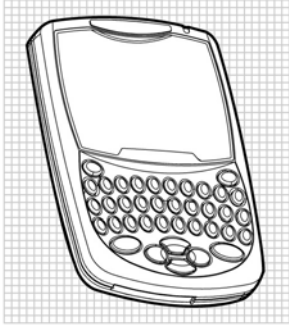





Your new H200 Reflex Two Way Messenger provides you with the proven reliability that has made us one of the leading Wireless Messenger providers. You can get clear and uninterrupted messenger communication with H200.

 You can use the device as a calculator in this menu. Please select Calculator from the Main Menu Screen. Then, <Figure Calc-1> will be displayed.

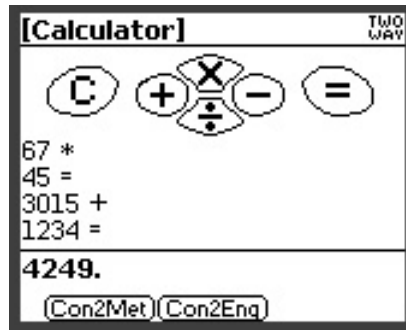


<Figure Calc-1>

    1. Direction ( , , , ) key, , , , and **number key** (1~0) are used.
2. Press the number key you want and direction keys displaying addition, subtraction, multiplication and division and repeat the process as shown above to press the number key. Press key to view the result.
3. You can change the value by changing the unit of length. When you use it, enter the number you want and then press key. Select **Con2Eng** if you want English weights and measures, and **Con2Met** if you want meter system (international unit) to display the converted value. Then, press to go back to <Figure Calc-1>.

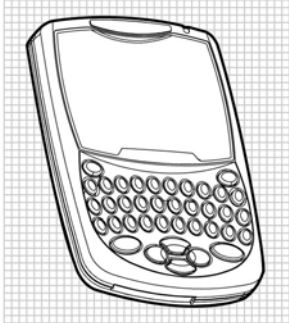

Your new H200 ReFlex Two Way Messenger provides you with the proven reliability that has made us one of the leading Wireless Messenger providers. You can get clear and uninterrupted messenger communication with H200.

 This is the Option menu for each Carrier, please contact the Service provider for detailed information.

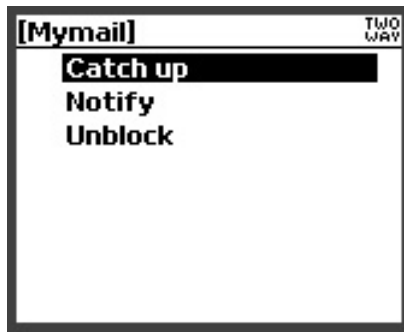

<Figure Mymail-1>





 
Your new H200 ReFlex Two Way Messenger provides you with the proven reliability that has made us one of the leading Wireless Messenger providers. You can get clear and uninterrupted messenger communication with H200.

- 1) Use only approved battery and power charger. Charging battery by any other method or unauthorized product may cause damage to the device.
- 2) Keep in mind that a new battery's full performance is achieved only after two or three times of completed charging.
- 3) The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time is noticeably shorter than normal, it is time to change to new battery. You can change the Battery in After Service Center.
- 4) Do not use device in the high temperature and humidity.
- 5) Battery must be recycled or disposed of properly and never dispose of batteries in a fire.
- 6) Do not drop, knock and shake device.
- 7) Do not use harsh chemicals, cleaning solvents, or strong detergents to clean device. Wipe it with a soft cloth slightly.
- 8) Do not attempt to open the casing on your device.
- 9) Do not expose device or charger to rain or snow. If device is flooded, never turn on power and ask service center.



Your new H200 ReFlex Two Way Messenger provides you with the proven reliability that has made us one of the leading Wireless Messenger providers. You can get clear and uninterrupted messenger communication with H200.

1. Screen cannot be turned on at all.  
It is because the battery is completely exhausted. Use it after charging.
2. Key is not pressed.  
It is because Key is put on a hold. Release Hold Key.
3. When I turn on the power, it is turned off immediately.  
Battery is completely discharged. Use it after enough charging.
4. I cannot hear the sound when I receive a message.
  - 4.1 Your device is set in Mute mode or the message receiving sound of Inbox is silent.  
Select Melody in Prefs → 1. Alert Settings → Set the Alert type.
  - 4.2 If Private Time is set on and it is in that period, the sound will not occur. If you want to release Private Time, select Prefs → 3. Private Time and select OFF.
  - 4.3 Please check if your device is in etiquette mode.
5. I cannot send a message.  
Check whether it is in Two way status at present and check if you set Tx set to OFF.  
If it is not Two way status, the message is stored in Outbox temporarily and will be automatically sent when it becomes Two way or Tx set is to ON.  
Contact your service provider if you still cannot send a message when it is in Two way status.
6. I cannot see the screen clearly.  
It is because Contrast is set too high or low.  
Adjust it properly in Prefs → 4. Setup → 2. Display Settings.
7. I can see the screen but it does not operate at all.  
Turn off the power by pressing  in the upper left of the device for about 4 seconds and then press that key again to turn it on.  
If it still does not operate, push off the Reset key to the right located at the right bottom of the device and push it to the left to turn it on.  
(Caution) It will result in deleting all the messages you saved.
8. Backlight is not turned on.  
Press  located at the upper left of the device for about 2 seconds.
9. I locked it but forgot the password.  
Please visit A/S center to release the Password.  
Initial Lock Password is '0000'.
10. The letter is too small.  
It is because it is set as Small Font.  
Select Large Font in Prefs → 4. Setup → 2. Display Settings.

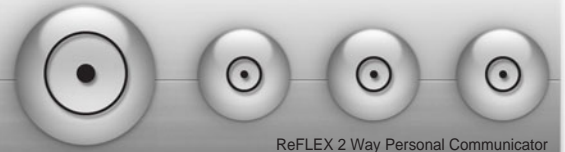

11. I cannot add the space and symbol is added.  
It is in Alt Lock mode. Press Alt key to release Alt mode.
12. Periodically, the date and time are incorrect.  
Please go to Preference menu from the main screen and then select "4. Setup"  
And select "1. Set Date & Time" and set the current Date and Time again.
13. No SVC icon appears or Fail to send message  
You probably are in the area out of the coverage of ReFLEX network.



Your new H200 ReFlex Two Way Messenger provides you with the proven reliability that has made us one of the leading Wireless Messenger providers. You can get clear and uninterrupted messenger communication with H200.

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communication.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception. Which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.



Your new H200 Reflex Two Way Messenger provides you with the proven reliability that has made us one of the leading Wireless Messenger providers. You can get clear and uninterrupted messenger communication with H200.

This equipment is suitable for use in Class I, Division 2, Groups A, B, C and D. ; or Nonhazardous locations only.

Warning - Explosion Hazard - substitution of components may impair suitability for Class I, Division 2 ; Hazardous Locations.

Warning - Explosion Hazard - Do not replace Battery unless area is known to be Nonhazardous.