



User's Guide

TALKABOUT™
Personal Interactive Communicator



Model T900
FLEX™ Technology

Contents

Introduction	1	Reminder Alert.....	18
Effective Use of Your Communicator (PIC)	2	Private Time	19
Getting Started	3	Setting Private Time.....	19
Battery Information.....	3	Quiet Mode	20
Installing/Replacing the Battery.....	4	Setting the Quiet Mode.....	20
Control Buttons.....	6	Addresses	21
ALT-mode Functions.....	8	Creating an Address Book Record.....	21
Turning Your Communicator (PIC) On ...	9	Searching the Address Book	22
Turning Your Communicator (PIC) Off ...	9	Editing Addresses.....	22
Messaging Service Instructions	10	Deleting Addresses.....	23
Sending a Test Message to Yourself.....	10	Messages	24
Backlight	11	Selecting an Address.....	24
Setting Up Your Communicator (PIC).....	12	Composing a Message	25
Using the Main Menu.....	12	Sending a Message	26
Creating a Signature	13	Mailbox.....	26
Time and Date	14	Previewing and Reading Messages	27
Setting the Time and Date	14	Previewing Messages	27
Alerts	15	Reading Messages	28
Setting the MailBox Alert Mode	15	Replying to Messages.....	29
Setting the News/Info Alert Mode	16	Forwarding Messages.....	30
Setting News/Info InBox Alerts	16	Resending Messages from the MailBox ...	31
Setting the Alert Volume.....	17	Deleting Messages.....	32
		Deleting All Read Messages	32

Deleting Messages from an InBox	33	Checking the Battery Status	42
Advanced Messaging	34	Checking Message Memory Status	42
Using Info-On-Demand	34	Displaying Communicator (PIC) Information	42
Setting News AutoPreview.....	35	Features	43
Alarms	36	Setting the Key Click	44
Setting the Alarm	36	Setting Transmitter Off Mode	44
Folders	37	Care & Maintenance	45
Using Your Personal Folder.....	37	Cleaning Your Communicator (PIC).....	45
Using Your News/Info Folder	38	Questions?	46
InBoxes	39	FCC Compliance	47
Using Your News/Info InBox.....	39	Safety Information	48
Creating an InBox.....	39	Electronic Devices	49
Viewing InBox Message History	40	Aircraft.....	50
Setting the InBox History	40	Blasting Areas	50
Moving an InBox Up/Down	41	Potentially Explosive Atmospheres.....	50
Deleting an InBox	41	Warranty	52
Vital Signs	42		
Checking Vital Signs	42		

Introduction

Congratulations on your purchase of the TalkAbout™ T900 Personal Interactive Communicator (PIC). Whether receiving or sending messages, with its unique capabilities the TalkAbout T900 Personal Interactive Communicator can become a vital part of your business and personal life and change the way you communicate with family, friends, and business associates.

This guide contains operating instructions that explain how to use your new communicator (PIC), and it provides helpful suggestions for first-time, as well as experienced, users.

A detachable quick reference card is included on the back cover for your convenience.



Effective Use of Your Communicator (PIC)

Your Personal Interactive Communicator (PIC) can help you keep in contact with everyone important to you. This communicator (PIC) features a fully backlit keyboard enabling you to send wireless messages to internet email addresses and other communicator (PIC) devices, yet it is small enough to comfortably wear on your belt or fit in a pocket. By supplying business associates, family members, and friends with your wireless address information, you can be contacted whenever needed.




Getting Started

Battery Information

Your T900 Personal Interactive Communicator operates with a single AA-size alkaline battery (do not use carbon-zinc batteries). The AA-size battery also recharges the internal transmit power source.

Two AA-size batteries are provided with your communicator (PIC). The first battery already installed in your communicator (PIC) keeps the internal transmit power source charged and may not last long. Use the second AA-size to replace the first battery.

A battery gauge is provided within the Vital Signs feature which can be accessed from the Main menu. See “Checking Vital Signs” on page 42.


If  displays, the AA-battery is low. Replace the AA-size battery.

If it has been a while since the battery was replaced, you may need to allow the internal transmit power source to charge overnight (or for a number of hours) to ensure the proper operation of your communicator (PIC).

Note: *This product may contain a Nickel-Cadmium (NiCd) rechargeable battery that must be recycled or disposed of properly. Recycling facilities may not be available in all areas.*



Installing/Replacing the Battery

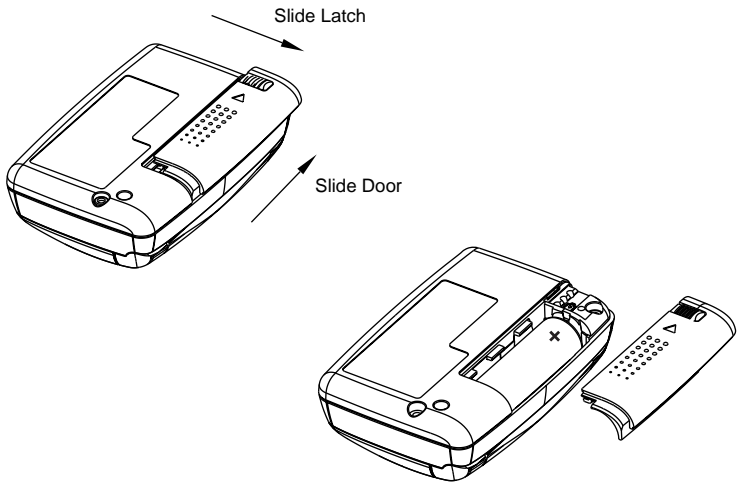



- 1 Holding the communicator (PIC) face down, slide the latch toward the battery door. Slide the battery door in the direction of the arrow to unlatch the battery door. Lift the battery door to open.

Remove the old battery, noting the polarity.


Insert a new battery so the positive (+) and negative (.) polarity markings on the battery match the polarity diagram near the battery compartment.

Replace the battery door cover and lock the battery door latch.







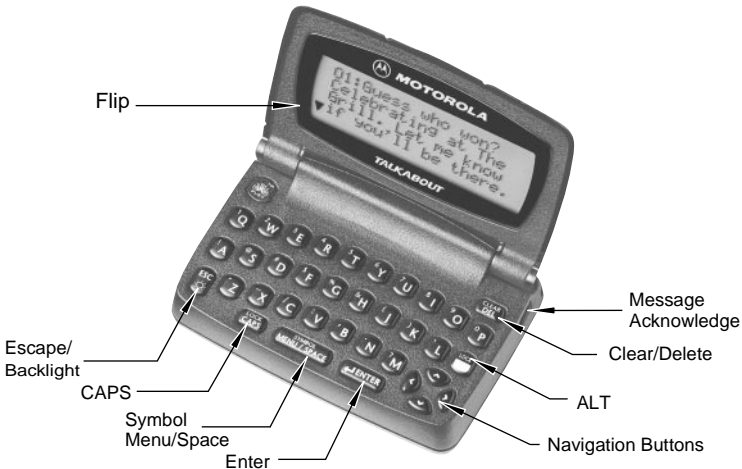






Caution: Note the polarity markings (+) and (-). Do not insert the battery backwards. This causes all messages to be erased.



Control Buttons






- Flip** Houses and protects the LCD screen. Opening the flip awakens the communicator (PIC). Closing the flip puts the screen into sleep mode.
-  **Escape/
Backlight** Used to return to the preceding screen without accepting any option or changes you may have made. Also used to access the Status screen from the Main menu and to turn on and off the backlight.
-  **CAPS** When pressed, the next character typed is capitalized.
-  **Menu/Space** Used to access the Main menu or to insert a space in text while composing a message.
-  **Enter** Used to select the highlighted option or to save settings.
-  **Navigation buttons** Press  or  to highlight and scroll between menu options. Press  or  to page through menu options.
-  **ALT** Activates the Alt-mode control keys, which are color coded yellow on the keyboard. The status icon  displays on the right of the screen. The next key pressed indicates the Alt-mode function.
-  **Message Acknowledge** Used to acknowledge incoming message alerts while the pager is in the holster.
-  **Delete** When pressed, the character to the left of the cursor is deleted.



ALT-mode Functions

The key sequences displayed below provide access to the corresponding ALT-mode functions.




ALT-Lock— Activates the Alt-mode control keys, which are color-coded yellow on the keyboard. To exit Alt-Lock-mode, press  again.



Cancel— Clears the entire message screen when composing a message.






CAPS Lock— Activates the CAPS Lock-mode. All letters are typed in upper case. To exit CAPS Lock-mode, press  again.



Carriage Return— Places a carriage return in the message being composed after the current cursor position.



Symbols— Activates the Symbols key. Seventeen (17) additional symbols can be used when writing a message. When this key sequence is pressed, the available symbols are displayed at the bottom of the screen. Press  or  to highlight the desired symbol and press . The selected symbol is inserted at the cursor.




Turning Your Communicator (PIC) On

- 1 Ensure that a fresh battery is properly installed as described in “Installing/Replacing the Battery” on page 4.

Open the flip and press any key to turn your PIC on. The PIC emits a 4-second power-up alert, and the Status screen displays.





From the Status screen, press any key to display the Main menu.



- If you do not select a menu item, the PIC goes into standby mode.
- If you have one or more unread messages,  flashes on the Standby screen.

Note: If the communicator (PIC) does not turn on, see “Safety Information” on page 48.

Turning Your Communicator (PIC) Off

You can turn off your communicator (PIC) to save battery power. (The communicator (PIC) receives messages stored by the system when the unit is turned back on within the coverage area.)

- 1 From the Main menu, press  or  to highlight  Power Off and press .

Highlight  Yes and press .



Messaging Service Instructions


To begin messaging service, contact your service provider for activation instructions. The phone number of the messaging service can be found in the literature provided by the service provider.


Sending a Test Message to Yourself

After you have activated your service, it's a good idea to test your communicator (PIC) and service by sending a message to yourself. Start by using the telephone number, web site, or email address (and a wireless address) provided by your service provider. Then, enter a short message. If you are sending a word message from a telephone, an operator will assist you; otherwise, press the telephone buttons to enter a numeric message or type a message and send it. While you are waiting for the message to reach your communicator (PIC), refer to "Reading Messages" on page 28 for information about how to read a message. If your communicator (PIC) does not receive the message within a few minutes, contact your service provider. After you have tested the communicator (PIC), read the rest of this guide to learn about the many useful features of your new communicator (PIC).



Backlight

In low-light conditions, press and hold  to turn on the backlight. The backlight remains illuminated until the communicator (PIC) times out and returns to the Standby screen.

To manually turn the backlight off, press and hold .



Setting Up Your Communicator (PIC)






This section explains how to set the time and date, alarm time, alert mode, News/Info Inbox alerts, and other features via the Preferences menu.

Using the Main Menu

Use the Main menu for the following features:

- Access the MailBox
- Access the New/Info InBox
- Send Messages
- Access Info-On-Demand (If Info-On-Demand services are available)
- Access the Address Book
- Access the Personal Folder
- Access the News/Info Folder
- Delete all read messages in the InBoxes
- Change Preferences
- Display Vital Signs
- Turn the communicator (PIC) Off

From the Standby screen, press , , or a navigation button to display the Main menu.

Press , , , or  to highlight the desired feature and then press .



Creating a Signature

Your TalkAbout T900 Personal Interactive Communicator's messaging features allow you to create a signature for your messages and automatically append your signature to each message you send. To do so, proceed as follows.

- 1 From the Main menu, press or to highlight Preferences and press .

Press or to highlight Signature and press .

Using the keyboard, type your signature as you want it to appear in your messages and press . Your signature is applied to each message you send.



Time and Date

Setting the Time and Date

- 1 From the Main menu press or to highlight Preferences and press .

Press to highlight Set Time & Date and press .

Press or to change the hour, minutes, and date. Press or to move between fields.

When you are finished setting the time and date, press to accept your changes and return to the Preferences menu. Press at any time to exit without saving your changes.



Alerts

Setting the MailBox Alert Mode

1 From the Main menu press or to highlight Preferences and press .

Press or to highlight MailBox Alert and press .

Press , , , or to highlight the desired alert and press .

- To sample an alert, highlight the desired alert and press .
- If an audible alert is selected, displays on the Status screen.
- If Vibrate is selected, displays on the Status screen.
- If Silent is selected, no alert icon is displayed on the Status screen.
- Alert durations are shortened when the battery is low.



Setting the News/Info Alert Mode

Your communicator (PIC) provides the capability to set the alert modes for information messages differently than for personal messages to distinguish between message types. You can set a unique alert for News/Info InBox messages that have not been assigned to an InBox.

- 1 From the Main menu press or to highlight Preferences and press .
Press to highlight News/Info Alert and press .
Press , , , or to highlight the desired alert and press .

Setting News/Info InBox Alerts

Your communicator (PIC) provides the capability to set an alert for each information inbox.

- 1 From the Main menu press or to highlight News/Info InBox and press .
Press or to highlight the desired inbox and press .
Press or to highlight Set InBox Alert and press .
Press or to highlight the desired alert option and press .

Setting the Alert Volume



1 From the Main menu press or to highlight Preferences and press .

Press or to highlight Alert Volume and press .

Press or to decrease the volume or or to increase the volume and press .

- To sample an alert volume, press .



Reminder Alert

When this feature is turned on, it instructs the communicator (PIC) to generate periodic reminder alerts when there are unread personal messages in the communicator (PIC). The communicator (PIC) does not emit reminder alerts for News/Info messages, or messages with an alert setting of Silent. To turn the reminder alert on or off, proceed as follows.

- 1 From the Main menu, press or to highlight Preferences and press .
Press or to highlight Reminder Alert and press .
Press or to highlight On or Off and press .

Reminder Alert Types

- If any audible alert is selected, the reminder alert is a chirp.
- If a vibrate alert is selected, the reminder alert is a short vibration.
- If a chirp and vibrate alert is selected, the reminder alert is a chirp followed by a 1-second vibration.
- If a vibrate and beep alert is selected, the reminder alert is a 2-second vibration followed by a chirp.



Private Time

Setting Private Time

Private Time mode allows you to specify a time period during which the communicator (PIC) receives messages and performs all functions without an audible or vibrate alert.

1 From the Main menu press or to highlight Preferences and press .

Press or to highlight Set Private Time and press .

Press or to activate Private Time mode.

Note: When Private Time is turned on, displays next to the time in the Set Private Time screen. When it is turned off, is displayed.

Press and to navigate between fields, and and to change the highlighted value.

After setting the On time, repeat Step 4 to set the Off time.





When finished, press .







Quiet Mode


Setting the Quiet Mode

When active, Quiet Mode allows you to temporarily override audible alerts. All audible alerts are changed to vibrator alerts.

- 1 From the Main menu press  or  to highlight  Preferences and press .

Press  or  to highlight  Quiet Mode and press .

Press  or  to highlight  On and press .

If the current Main Alert setting is audible or vibrate, a flashing  displays on the Status screen. If the Main Alert is set to silent, an alert icon does not display on the Status screen.



Addresses

The TalkAbout T900 Personal Interactive Communicator (PIC) contains an Address Book for storing the address information for up to 250 people. You can include a name, wireless address, pager number, email address, home telephone number, work telephone number, mobile telephone number, fax/other number, and notes for each Address Book entry.

Creating an Address Book Record

1 From the Main menu press or to highlight Address Book and press .

Press or to highlight New Entry and press .

In the Name field, type the name for the entry that you want shown in the Address Book and press .

Press or to highlight the desired option and press .

Type the appropriate text in each field and press .





Repeat Steps 4 and 5 until all Address Book fields are complete.

Press or to highlight Save Entry and press . ENTRY SAVED displays when complete.





Searching the Address Book




You can search for Address Book entries without scrolling through the Address Book by using the search function.

- 1 From the Address Book menu, press  or  to highlight  Search and press .

Type the first few characters of the addressee's name. The Address Book jumps to the first matching entry and continues to refine the search based on the number of letters entered.


To select the Address Book entry, press . Press  to display the Entry Options menu.





Editing Addresses

- 1 From the Address Book menu, press  or  to highlight the desired entry and press .

Or

See “Searching the Address Book” on page 22 to locate the desired entry.

Press  to display the Entry Options menu.

Press  or  to highlight  Edit Entry and press .



Press or to highlight the field you want to edit and press .

Make the desired changes in each field and press .

Repeat Steps 4 and 5 until you have completed all desired changes.

Press or to highlight Save Entry and press . ENTRY SAVED displays when complete.

Deleting Addresses

- 1 From the Address Book menu, press or to highlight the desired entry and press .

Or

See “Searching the Address Book” on page 22 to locate the desired entry.

Press to display the Entry Options menu.

Press or to highlight Delete Entry and press .

Press or to highlight Yes and press . ENTRY DELETED displays when your communicator (PIC) has finished deleting the entry.









Messages



This section discusses how to select an addressee, compose a message, and send messages with your Personal Interactive Communicator (PIC).

Selecting an Address

To select an address from your Address Book, proceed as follows.




- 1 From the Send Message menu, press  or  to highlight  Select Address and press .

Press  or  to highlight  Address Book and press .

Press  or  to highlight the desired recipient.

Or

Follow the procedures in “Searching the Address Book” on page 22 to locate the desired recipient.

Press  or  to highlight the desired address for the recipient and press .

Note: To change the addressee for a message, repeat Steps 1 through 4.



Specifying an Address Not in Your Address Book

- 1 From the Send Message menu, press or to highlight **Select Address** and press .

Press or to highlight the desired address type and press .

Type the desired address in the field provided and press .


Composing a Message

Your TalkAbout T900 Personal Interactive Communicator has a keyboard that allows you to quickly type and send your message. For information on Alt-mode keys and Symbols, see “ALT-mode Functions” on page 8. To compose and send a message, proceed as follows.

- 1 From the Send Message menu, press or to highlight **Write Message** and press .





After you finish composing the message, press .

Note: Press to insert a carriage return.



Sending a Message





Once you have selected an addressee and composed a message, you can send it.

- 1 From the Send Message menu, press  or  to highlight  Send Message and press .

MESSAGE TRANSMITTING displays to inform you that your message was sent to the selected addressee.






Mailbox

The MailBox allows you to read, save, respond, forward, and delete messages. It provides a transmission status log for messages sent and acts as a holding area for unsent messages, which are categorized into the following types:






-  Sending in Progress (Flashing)
-  Sent Successfully
-  Message in Queue
-  Send Message Failed





Previewing and Reading Messages

- When you receive a personal or information service message, the Status screen displays and the communicator (PIC) alerts according to the MailBox or News/Info Alert setting. A flashing  or  displays on the Main menu indicating which type of message has been received.
- To stop the alert, press the side button or open the flip. The  on the Standby screen and  or  on the Main menu flash until you have read all received Mailbox or News/Info service messages.
- If reminder alerts were preset, the communicator (PIC) periodically alerts to remind you of any unread Mailbox messages.

Previewing Messages




- 1 From the Main menu, press  or  to highlight  or  and press  to display a list of the first 4 messages.




If you have more than 4 messages, use  or  to highlight the desired message listing.

- displays to the left of messages you previously viewed and read.
- ✓ displays when a reply was successful.
- ✗ displays when a reply was unsuccessful.
- ? displays to the left of any unread MailBox message with custom reply choices attached.











Reading Messages

- 1 To read a message, (while previewing) press  or  to highlight the desired message and press .

Press  or  to scroll through the text of a message or press  to page through the message.

Note: If preset, the time and date the message was received displays as the last line of each message.

At the end of the message, a highlighted menu bar is displayed. Press  to reply, forward, move, or delete the message, or press  to return to the Message Preview screen.

Note: At any time, while previewing or reading a message, press  to access the Message Options menu with  Next Message,  Reply to Message,  Forward Message,  Move to Folder, and  Delete Message options.



Replying to Messages

For your convenience, your TalkAbout T900 Personal Interactive Communicator (PIC) has several pre-programmed reply messages. To reply to a message using one of the pre-programmed replies, proceed as follows.

Sending a Pre-Programmed Reply

- 1 While previewing or reading a message, press **SYMBOL MENU / SPACE** to access the Message Options menu.

Press **▲** or **▼** to highlight **Reply to Message** and press **↵ ENTER**. Your communicator (PIC) displays the list of pre-programmed reply messages from which you can choose.





Press **▲** or **▼** to highlight the desired reply and press **↵ ENTER**. Your communicator (PIC) displays **MESSAGE TRANSMITTING**.

⌂ flashes to the left of the message to indicate the reply is in progress. If the message reply was successful, **✓** displays to the left of the message on the Message Preview screen. If the message reply was unsuccessful, **✗** displays to the left of the message.








Sending a Custom Reply

- 1 While viewing a message, press  to display the Message Options menu.

Press  or  to highlight  Reply to Message and press .

Press  or  to highlight  Custom Reply and press .





Type the message reply and press .

To send the reply, press  or  to highlight  Send Message and press .

Forwarding Messages

Your TalkAbout T900 Personal Interactive Communicator (PIC) allows you to append and forward your received messages without retyping them. To do so, proceed as follows.

- 1 While viewing a message, press  to display the Message Options menu.

Press  or  to highlight  Forward Message and press .



If you want to append a message to the message being forwarded, press **▲** or **▼** to highlight **✎ Write Message** and press **↵ ENTER**.

After you finish composing the message, press **↵ ENTER**.

Press **▲** or **▼** to highlight **✉ Select Address** and press **↵ ENTER**.

Select the desired address and press **↵ ENTER**, (See “Selecting an Address” on page 24.) or type the desired addresses manually.

Resending Messages from the MailBox

You can resend messages that were not sent successfully.

- 1 From the Main menu, press **▲** or **▼** to highlight the message you want to resend and press **SYMBO
MENU / SPACE**.




Press **▲** or **▼** to highlight **↶ Resend Message** and press **↵ ENTER**.




Deleting Messages

You can delete any or all messages from your T900 Personal Interactive Communicator (PIC). To delete the message currently being viewed, proceed as follows.





- 1 While viewing a message, press  to display the Message Options menu.




Press  or  to highlight  Delete Message and press .

- To exit without deleting the message, press .

Deleting All Read Messages

All read messages in the inboxes can be deleted via the Main menu. Messages in your Personal Folder and News/Info Folder are not affected by this option.

- 1 From the Main menu, press  or  to highlight  Delete Messages and press .

Press  or  to highlight  Yes and press .



Deleting Messages from an InBox

- 1 From the Main menu, press or to highlight the inbox containing the messages you want to delete and press .

Caution: If you select Delete All Messages, both Read and Unread messages are deleted.

Press or to highlight Delete Read Messages or Delete All Messages and press .

Press or to highlight Yes and press .



Advanced Messaging Using Info-On-Demand

The Info-On-Demand feature provides you with the ability to request information such as News, Sports, Stocks, etc. This information is sent to your communicator (PIC) as a MailBox message. To request information, proceed as follows.

- 1 From the Main menu, press or to highlight Info-On-Demand and press to display the topic inbox list.

Press or to highlight the desired topic and press to send your request.

After you send your request, `REQUEST TRANSMITTING` displays on the Status screen.

While the communicator (PIC) retrieves the requested information, the icon for the corresponding topic flashes. When the request is complete, the topic icon stops flashing (or Request Failed is displayed on the Status screen accompanied by an alert if the request was unsuccessful). If the request was successfully sent to the system, a message is received (typically within 2-3 minutes). See “Reading Messages” on page 28.



Setting News AutoPreview

When this feature is turned on, it causes the communicator (PIC) to automatically jump to the News/Info InBox when you press any key after receiving an information service message. To turn on News AutoPreview, proceed as follows.

- 1 From the Main menu, press or to highlight Preferences and press .
Press or to highlight News AutoPreview and press .
Press or to highlight Yes or No and press .



Alarms

The alarm can be set for either a specific time and date, or it can be used as a daily alarm.

Setting the Alarm

1 From the Main menu, press or to highlight Preferences and press .

Press or to highlight Set Alarm and press .

The alarm on and alarm off symbols indicate the status of the alarm. To change the alarm status, press or when the symbol is highlighted.

Press or to move between fields and or to increase to decrease the value in each field.

At any time, press to save the changes and return to the Preferences menu. Or press to exit without saving your changes.

- To set a Daily Alarm, increment the month (or day) field past 12 (or 31) to display .
- displays on the Status screen indicating that an alarm is set. Press any key to silence an alarm.



Folders

Using Your Personal Folder

Use your Personal Folder to save personal messages. To move a message from the MailBox to your Personal Folder, proceed as follows.

- 1 Press or to highlight the message you want to move to your Personal Folder and press .

Or

While reading a message, press to display the Message Options menu.

Press or to highlight Move to Folder and press .

Messages in your Personal Folder can be deleted individually, but are protected from the Delete Messages option and from automatic deletion when memory is full. To delete a message from your Personal Folder, proceed as follows.

- 1 Press or to highlight the message you want to delete and press .

Or

While reading a message, press to display the Message Options menu.

From the Message Options menu, press or to highlight Delete Message and press .



Using Your News/Info Folder

Use your News/Info Folder to save News/Info messages. To move a message from the News/Info InBox to your News/Info Folder, proceed as follows.

- 1 Press or to highlight the message you want to move and press .

Or

While reading a message, press to display the Message Options menu.

Press or to highlight Move to Folder and press .

Messages in your News/Info Folder can be deleted individually, but are protected from the Delete Messages option and from automatic deletion when memory is full. To delete a message from your News/Info Folder, proceed as follows.

- 1 Press or to highlight the message you want to delete and press .

Or

While reading a message, press to display the Message Options menu.

Press or to highlight Delete Message and press .



InBoxes

Using Your News/Info InBox

Your TalkAbout T900 Personal Interactive Communicator (PIC) is capable of receiving information service messages. The following sections contain instructions on how to create an inbox, view and set an inbox message history, move an inbox, and delete an inbox.

Creating an InBox

Your communicator provides you with the capability to create an inbox for any information service message for which no information service inbox currently exists. To do so, proceed as follows.

- 1 From the Main menu, press or to highlight **i News/Info InBox** and press .

Press or to highlight the message for which you want to create an inbox and press to display the Message Options menu.

Press or to highlight **Create InBox** and press .



Viewing InBox Message History

After an information service inbox has been created, all messages received at the same address/sub-address are stored in the inbox. The InBox History feature allows you to specify the number of messages to store in the inbox before overwriting them with new messages.

Setting the InBox History

- 1 From the Main menu, press **▲** or **▼** to highlight **i News/Info InBox** and press **↵ENTER**.

Press **▲** or **▼** to highlight the desired inbox and press **SYMBO MENU / SPACE**.

Press **▲** or **▼** to highlight **Set InBox History** and press **↵ENTER**.

- The current selection is highlighted.

Press **▲** or **▼** to highlight the new selection and press **↵ENTER**.

- The option selected determines how many messages are retained in the corresponding inbox before they are replaced by new messages.
- Setting the history to **No History** will keep only the newest message.



Moving an InBox Up/Down

Your TalkAbout T900 Personal Interactive Communicator provides the capability to position your inboxes in the order of your preference. To move an inbox up or down, proceed as follows.

- 1 From the Main menu, press or to highlight **i News/Info InBox** and press .

Press or to highlight the desired inbox and press .

Press or to highlight **Move InBox Up** or **Move InBox Down** and press .

Deleting an InBox

- 1 From the Main menu, press or to highlight **i News/Info InBox** and press .

Press or to highlight the inbox to be deleted and press .

Press or to highlight **Delete InBox** and press .

Press or to highlight **Yes** and press .





Note: *Deleting an InBox also deletes all messages contained in the InBox.*



Vital Signs

Checking Vital Signs

The Vital Signs feature options include displays for the current status of the battery, message memory, and information about your communicator (PIC).





From the Main menu, press  or  to highlight  Vital Signs and press .

Checking the Battery Status

Press  or  to highlight  Battery and press .

- The percentage of remaining battery power is displayed.

Checking Message Memory Status

Press  or  to highlight  Message Memory and press .


- The amount of memory used for both MailBox and News/Info messages is displayed.

Displaying Communicator (PIC) Information

Press  or  to highlight  About and press .



Features

Low Battery Indicator: A  displays on the fourth line of the Status screen at the onset of a low battery condition. Refer to “Battery Information” on page 3 if the internal battery is low.

Message Status: If turned on, the third line of the Status screen displays text messages that indicate carrier-specific service modes. Refer to your service provider literature.

Updated Message: If your communicator (PIC) is configured to save messages received with errors, **UPDATED** displays at the beginning of the message when an update occurs. This display indicates the message has been retransmitted to correct previously received errors.

Out of Range: If programmed, **TT** displays whenever you are out of your coverage area. Upon returning to your coverage area, **TT** no longer displays on the Status screen.

Memory Full Indicator: When the main message memory is full, **MEMORY FULL** displays on the second line of the Status screen.

- When the PIC's memory is full, the oldest messages (read first, then unread) are automatically deleted to make room for new messages.



Setting the Key Click

When this feature is turned on and the communicator (PIC) is in audible mode, the communicator emits a "click" whenever a button is pressed. The click is not heard when the communicator is in quiet mode.

1 From the Main menu, press or to highlight Preferences and press .

Press or to highlight Key Click and press .

Press or to highlight On and press .

Setting Transmitter Off Mode

When the transmitter is turned off, the communicator cannot send messages or replies. However, your communicator (PIC) can receive messages. See "Safety Information" on page 48 for more information.

1 From the Main menu, press or to highlight Preferences and press .

Press or to highlight Transmitter Off and press .

Press or to highlight Yes and press .



Care & Maintenance

The TalkAbout T900 Personal Interactive Communicators are durable, reliable, and can provide years of dependable service; however, they are precision electronic products. Water and moisture, excessive heat, and extreme shock may damage the communicator (PIC). Do not expose your communicator (PIC) to these conditions. If repair is required, the Motorola Service Organization, staffed with specially trained technicians, offers repair and maintenance facilities throughout the world.

You can protect your communicator (PIC) purchase with an optional extended warranty covering parts and labor. For more information about warranties, please contact either your service provider, retailer, or Motorola, Inc. at 1-800-548-9954. For repairs in the U.S., call Motorola, Inc. at 1-800-548-9954, in Canada, 1-800-323-9685, in the U.K. and Ireland, call 01703-666-333. In the U.S., to contact Motorola, Inc. on your TTY, call 1-800-793-7834.

Cleaning Your Communicator (PIC)

To clean smudges and grime from the exterior of your communicator (PIC), use a soft, non-abrasive cloth moistened in a mild soap and water solution. Use a second cloth moistened in clean water to wipe the surface clean. Do not immerse in water. Do not use alcohol or other cleaning solutions.



Questions?

If you have any questions about the use of your Motorola T900 Personal Interactive Communicator (PIC), in the U.S. call 1-800-548-9954 or 1-800-793-7834 (TTY), in the U.K. call 0990-168556. If you have questions about your wireless service, contact your service provider. For information about other Motorola products, please visit our web site at www.motorola.com.

Patent Information

This unit is manufactured under one or more Motorola U.S. Patents. A partial listing of these patents is provided on the inside cover of the battery door. Other patents covering this product are pending.

4336524	4860003	5128665
4390198	4868561	5153582
4412217	4908523	5157391
4518961	4910510	5162790
4644347	4928096	5168493
4701759	4940963	5311516
4755816	5051993	5325088
4829466	5073767	5371737
4835777	5075684	5450071
4839628	5089813	
4851829	5117500	

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Safety Information

Read this information before using a wearable communicator (PIC).

First introduced in 2000, the Personal Interactive Communicator (PIC) is one of the most exciting and innovative electronic products ever developed. With it, you can stay in contact with your family, your office, information services, and others. For the safe and efficient operation of your communicator (PIC), observe these guidelines:

Your communicator (PIC) is a radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) energy.

The communicator (PIC) transmitter operates in the frequency range of 896 MHz to 902 MHz, and the receiver operates in the range of 929 MHz to 942 MHz. It utilizes commonly used frequency modulation (FM) techniques. The unit transmits at a power level of 0.15W for short periods of time (from 0.016 to 0.160 seconds). Transmissions occur infrequently and usually follow within a few seconds of a page that has been received or when the unit is first turned on. In 1991, the Institute of Electrical and Electronics Engineers (IEEE), and in 1992, the American National Standards Institute (ANSI), updated the 1982 ANSI Standard for safety levels with respect to human exposure to RF energy. Over 120 scientists, engineers, and physicians from universities, government health agencies and industry, after reviewing the available body of research,

developed this updated standard. In March, 1993, the U.S. Federal Communications Commission (FCC) proposed the adoption of this updated Standard. The design of your communicator (PIC) complies with this updated Standard.

You may choose to turn the transmitter off in your communicator at any time. Refer to “Setting Transmitter Off Mode” on page 44.

Electronic Devices

Most modern electronic equipment is shielded from RF energy, however, RF energy from your communicator may effect inadequately shielded electronic equipment.

Check with the manufacturer or it's representative to determine if the following equipment or systems are adequately shielded from external RF energy:

- Motor Vehicle electronic and entertainment systems (standard and any add-on equipment).
- Medical Equipment, hospital or personal (such as pacemakers, hearing aids, etc.).

Turn OFF your communicator in health care facilities when any regulation posted in the areas instructs you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Aircraft

Current regulations prohibit the use of certain types of portable electronic devices (PEDs) on board commercial aircraft, due to the potential for interference with navigational and communications equipment.

- The following devices may not be operated at any time on aircraft: two-way transmitting pagers; commercial two-way transmitters (walkie-talkies); and devices designed to radiate RF energy on a specific frequency.
- The following devices may be operated when the aircraft is at the gate with the boarding door open, or, at the captain's discretion only, when the aircraft is away from the gate during extended ground time: cellular telephones.
- Conventional one-way pagers may be operated at all times.

Blasting Areas

To avoid interfering with blasting operations, turn OFF your communicator when in a "blasting area" or in areas posted "Turn off two-way radio." Construction crews often use remote control RF devices to set off explosives.

Potentially Explosive Atmospheres

Do not allow your T900 Personal Interactive Communicator (PIC) to be within the proximity of any potentially explosive atmospheres.

It is rare, but your communicator (PIC) may generate sparks. Communicator (PIC)s have internal electronic circuits which may be operational even when the device is turned OFF or the battery removed.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked and include the following:

- Gas stations
- Below deck on boats
- Fuel or chemical transfer/storage facilities
- Areas where air may contain chemicals or particles, such as grain, dust, or metal powders
- Any area where you would normally be advised to turn OFF your motor vehicle.

Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle that contains your communicator (PIC). Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publications Sales Division.

Warranty

ONE (1) YEAR STANDARD LIMITED WARRANTY AND PROVISIONS (U.S.A. ONLY)

Motorola warrants the pager against defects in material and workmanship under normal use and service for the period of time specified below. This express warranty is extended by Motorola, 1500 Gateway Blvd., Boynton Beach, Florida 33426 to the original end user purchaser only and is not assignable or transferable to any other party.

This warranty sets forth the full extent of MOTOROLA's responsibilities regarding the pager. Repair, replacement, or refund of the purchase price, at MOTOROLA's option, is the exclusive remedy. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY IS LIMITED TO THE DURATION CHOSEN. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE MOTOROLA PAGER, FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

Motorola pagers are shipped from the factory with a standard limited warranty of one (1) year on parts and labor from date of purchase by the original end user purchaser, based on proof of purchase. In the event of a defect, malfunction, or failure to conform to specifications during the warranty period, Motorola, at its option, will either repair, replace or refund the purchase price of the pager. Repair, at Motorola's option, may include the replacement of parts or boards with functionally equivalent reconditioned or new parts or boards. Replaced parts and boards are warranted for the balance of the original warranty period.

(continued)

LIMITED WARRANTY AND PROVISIONS (U.S.A. ONLY) continued

All parts and boards removed in the replacement process shall become the property of Motorola. This warranty does not cover defects, malfunctions, performance failures or damages to the unit resulting from use in other than its normal and customary manner, misuse, accident or neglect, the use of non-conforming parts, or improper alterations or repairs. This warranty does not cover wear and tear on covers or housings, nor the coverage or range over which the pager will receive signals.

For information on how to receive service on Motorola pagers or covered accessories, call 1-800-548-9954 or 1-800-793-7834 (TTY).

Pager warranty will be VOID if any of the following conditions occur:

- Pagers that are incomplete such as those in which boards or components are missing and/or incompatible.
- Pagers whose serial numbers do not match on the boards, or pagers in which the board serial numbers don't match the housing.
- Pagers that have been opened by, or had work performed by, anyone other than a Motorola authorized pager service center.
- Pagers received with non-conforming or non-Motorola housings or parts.

Flat rate repair fees apply to pagers and accessories not covered under warranty.

STATE LAW RIGHTS

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, THEREFORE THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada.

The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

Personal Numbers

Use the spaces provided below to write down your Personal Interactive Communicator's wireless address, and the number of your service provider. Additional spaces have been provided to write down the wireless address, pager number, or email address of your family and friends.

Service Provider

Wireless Address

Family and Friends

Wireless Address/Pager Number



MOTOROLA, the Stylized M Logo, and all other trademarks indicated
as such herein are trademarks of Motorola, Inc.

® Reg. U.S. Pat. & Tm. Off.

© 2000 Motorola, Inc.

All rights reserved.

Personal Communications Sector

1500 Gateway Blvd.,

Boynton Beach, FL 33426-8292















Printed in U.S.A. 5/00



























6881035B90-A

T900 Quick Reference Card

	Power on
	MailBox
	News/Info InBox
	Send Message
	Info-On-Demand
	Address Book
	Personal Folder/Move message to folder
	News/Info Folder
	Preferences
	Vital Signs
	Power Off
	Message has been read
	Message reply
	Reply in progress

	Delete Message/Inbox
	Successful Reply/Send
	Unsuccessful Reply/Send
	Message contains custom reply choices
	InBox
	InBox - messages read
	News/Info InBox
	InBox alert selected
	Out of Range
	Low Battery
	Audible Alert/Alarm
	Vibrate Alert/Quiet Mode
	Private Time
	Signature





	MailBox Alert, News/Info Alert
	Alarm/Set Alarm
	Set Time & Date
	Alert Volume/Key Click, Reminder Alert
	Transmitter Off
	Next/higher value
	Preceding/lower value
	Previous item
	Next item
	Move InBox Up
	Move InBox Down
	Battery Gauge





	Message Memory
	About Screen
	Back/Escape
	Yes/On
	No/Off
	News AutoPreview
	Set InBox History
	Next Message
	CAPS (not locked)
	CAPS Lock on
	Alt (not locked)
	Alt Lock On





Note:



A flashing icon denotes unread messages or a function in process.

Setting Time and Date





① From the Main menu press  or  to highlight  Preferences and press .


Press  or  to highlight  Set Time & Date and press .





Press  or  to change the hour, minutes, and date. Press  or  to move between fields.





When finished setting the time and date, press  to accept your changes and return to the Preferences menu. Press  at any time to escape without saving your changes.


Setting the Alarm

① From the Main menu, press  or  to highlight  Preferences and press .

Press  or  to highlight  Set Alarm and press .

The alarm on  and alarm off  symbols indicate the status of the alarm. To change the alarm status, press  or  when the symbol is highlighted.

Press  or  to move between fields and  or  to increase to decrease the value in each field.

At any time, press  to save the changes and return to the Preferences menu.